DAEWOO ELECTRONICS

LCD TELEVISION

INSTRUCTION MANUAL

DLV-42U1GMB
DLV-46U1UMB

Precaution about LCD Panel

⚠ Warning Precaution with Manipulation

- Refrain from strong mechanical shock and / or any force to the LCD panel. In addition to damage, this may cause improper operation or damage to the module and FFL(CCFL) back-light.
- **Note that the surface of LCD panel is very fragile and could be easily damaged.** Do neither press nor scratch the surface harder than a HB pencil lead.
- Wipe off water droplets or oil immediately. If you leave the droplets for a long time, staining and discoloration may occur.
- If the surface of the LCD panel is dirty, clean it using absorbent cotton or soft cloth with water.
- If the liquid crystal material leaks from the panel, it should be kept away from the eyes or mouth. In case of contact with hands, legs or clothes, it must be washed away thoroughly with soap.

⚠ Warning Precaution in Operation

- LCD products should be operated in standard environment.
  The standard environment which is ;
  - Temperature : 20±20℃ ;
  - Humidity : 65±5% ; and
  - Picture in Screen : Motion picture (avoid the still picture to prevent some afterimage)

- Avoid a direct ray of the Sun.

Caution

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

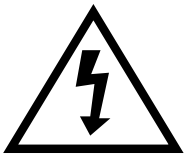

CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

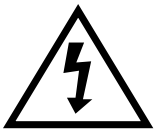

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk electric shock.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Important Safeguards

Please read the following safeguards for your TV and retain for future reference.
Always follow all warnings and instructions marked on the television.

1. Read, Retain and Follow All Instructions

Read all safety and operating instructions before operating the TV. Retain them safely for future reference. Follow all operations and instructions accordingly.

2. Heed Warnings

Adhere to all warnings on the appliance and in the operating instructions.

3. Cleaning

Unplug the TV from the wall outlet before cleaning. Do not use liquid, abrasive, or aerosol cleaners. Cleaners can permanently damage the cabinet and screen. Use a lightly dampened cloth for cleaning.

4. Attachments and Equipment

Never add any attachment and/or equipment without approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.

5. Water and Moisture

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

6. Setting

Do not place this TV on an unstable cart, stand or table. Placing the TV on an unstable base can cause the TV to fall, resulting in serious personal injuries as well as damage to the TV. Use only a cart, stand, bracket or table recommended by the manufacturer or salesperson.

7. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the TV and to protect it from overheating. Do not cover the ventilations openings in the cabinet and never place the set in a confined space such as built-in cabinet unless proper ventilation is provided. Leave a minimum 10 cm gap all around the unit.

8. Power Source

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your appliance dealer or local power company.

9. Grounding or Polarization

This TV is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. A warning that an apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.

10. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, wall outlets, and the point where they exit from the TV. MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.
Please place the TV set in such a way that the main plug can be easily disconnected.

11. Lightning

For added protection for this TV during a thunder storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV due to lightning and power-line surges.

Important Safeguards

12. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

13. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

14. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in fire or electric shock. Never spill liquid of any kind on or into the TV.

15. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electric Code, ANSI /NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

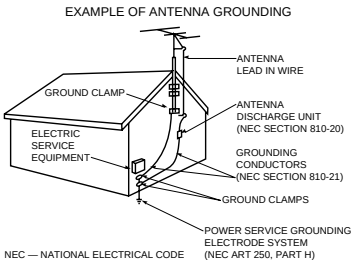
EXAMPLE OF ANTENNA GROUNDING
ANTENNA LEAD IN WIRE
GROUND CLAMP
ANTENNA DISCHARGE UNIT (NEC SECTION 810-20)
ELECTRIC SERVICE EQUIPMENT
GROUNDING CONDUCTORS (NEC SECTION 810-21)
GROUND CLAMPS
POWER SERVICE GROUNDING ELECTRODE SYSTEM (NEC ART 250, PART H)
NEC — NATIONAL ELECTRICAL CODE

16. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

17. Damage Requiring Service

Unplug the TV from the wall outlet and refer servicing to qualified service personnel under the following conditions:

(a) When the power-supply cord or plug is damaged.
(b) If liquid has been spilled, or objects have fallen into the TV.
(c) If the TV has been exposed to rain or water.
(d) If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV to its normal operation.
(e) If the TV has been dropped or the cabinet has been damaged.
(f) When the TV exhibits a distinct change in performance - this indicates a need for service.

18. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

19. Safety Check

Upon completion of any service or repair to the TV, ask the service technician to perform safety checks to determine that the TV is in safe operating condition.

20. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Warning

This section must be read carefully and followed by the user prior to the operation of the product.
The manual states important instructions for the user's own safety, and the proper operation of the product.

⚠ Warning Ignoring or disregarding the contents of this section and improper operation of the product may result in the person's death or serious injury.

In case of an accident, please unplug the unit from the outlet immediately.

To reduce the risk of electric shock, do not remove cover or back. No user - serviceable parts inside. Refer to qualified service personnel for repair.

Do not put any object that contains water - such as flowerpot - near to the unit.
The water may penetrate into the unit, and be a cause of fire or hazardous electric shock.

To prevent fire and damages to the product, unplug the unit from the outlet during thunder storm, or when it is left unattended and unused for a long period of time.

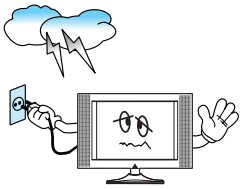

Do not put on or use the product near water and moisture-such as in a bathroom, washbowl, etc. It may be a cause of fire and electric shock hazards.

Slots and openings in the case are provided for ventilation to ensure reliable operation of the product. Never put in any item-such as a coin, paper, match- through these openings since it may touch dangerous voltage points that could result in fire or shock hazard.

Do not let children hang on or climb on the product since it may be a cause of serious injury.

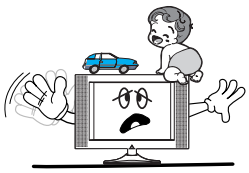

Hold the plug when unplugging the unit from the outlet. The cord may cause fire or electric shock if damaged.

Do not cause the product to lean or put it in an unstable place since it may cause a serious injury to a person, as well as damage to the product if it falls.

Do not put volatile substance-such as benzene, naphtha- near the product since it may cause a change in the product's colour.

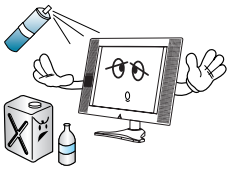

Do not spill water or drop the remote controller since it may be a cause of malfunctioning.

Do not view the TV too closely since it may cause damage in your eyesight.

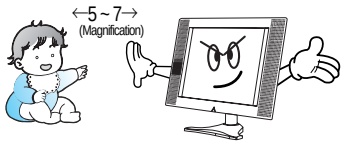

Refer servicing to qualified service personnel for cleaning at least once a year since dust inside the TV set may be a result or fire and malfunctioning of the product.

Warning

This section must be read carefully and followed by the user prior to the operation of the product.
The manual states important instructions for the user's own safety, and the proper operation of the product.

⚠ Caution Ignoring or disregarding the contents of this section and improper operation of the product may result in the person's death or serious injury.

Please keep the user's manual in a safe place for future reference.

Do not cover the top of the television set. Ventilation will be prevented, and it may be a cause of fire if the product is internally overheated.

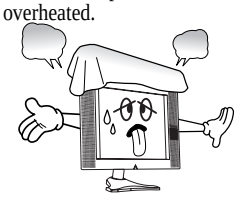

The product should be situated away from any heat source-such as radiators, heat registers, stoves, or other products that produce heat.

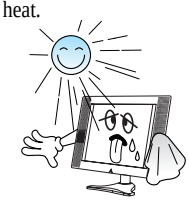

Do not put on any heavy item on the power cord since it may result in fire or hazardous electric shock if the cord is damaged.

Please be advised of electric wires and cables when installing the antenna. It may be a cause of hazardous electric shock and fire if the antenna touches or falls on the electric wire; thus, it must be installed firmly, and far away from the cables.

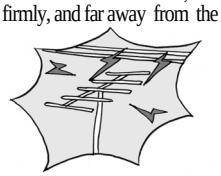

Unplug the power from the outlet and all the related connections from the unit to prevent electric shock. At least two people must work together to move the TV set when transporting to prevent the TV from falling, and consequently, any serious injury or damage.

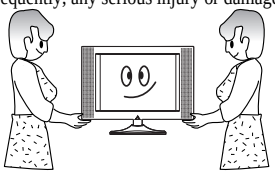

Do not touch the power cord with moisturized or wet hands when plugging to or unplugging from the outlet since it may be a cause of electric shock.

Do not expose the product to a dusty or moisturized place since it may be a cause of malfunctioning.

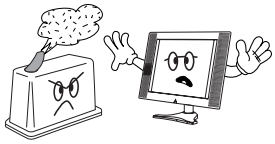

The surface of High-Glossy models is scratched easily.
When cleaning, use the microfiber sheet enclosed.
When a force to give it cleans strongly, it will be scratched and the product's colour will be changed. If foreign material gets in the fiber, the product will be scratched. Shake off the fiber cleanly and use.

- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

Table of Contents

Installation and Maintenance

Antenna Connection 9
Video Connection 12
Camcorder & Video Game Connection 13
DVD Player Connection 14
STB Connection 15
PC Connection 16
Flash Memory Card Connection 18
Cable TV Broadcasting Connection 19
Connect with the Dolby Digital AMP 20
Name of Each Part 21

Basic Guide

Parts of the Remote Controller 23
Method To Use Basic Menu 25
To Watch TV 26
Channel Programming 28
Setting Up TV Stations 29
Selection of AV/COMP/MMP Input Signal 33
Selection of HDMI/PC Input Signal 34

Application Guide

Screen Adjustment 36
Sound Adjustment 39
Utilities 43
PIP(Picture-In-Picture) / POP(Picture-of-Picture) 50
MMP(Multimedia Player) 52
Teletext 59
Channel Banner (Digital TV mode only) 60
Electronic Program Guide (EPG) 61
Troubleshooting 62
Standard of Product 65

Supplied Accessories

Make sure that the following accessories are provided with the product.

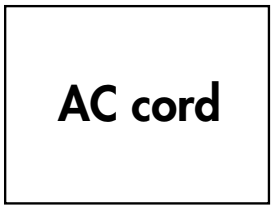

AC cord

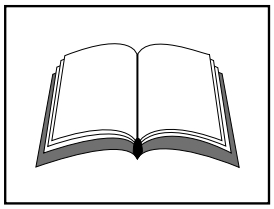

Instruction manual

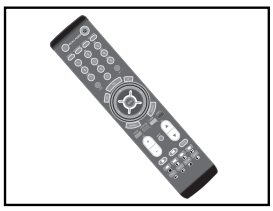

Remote controller

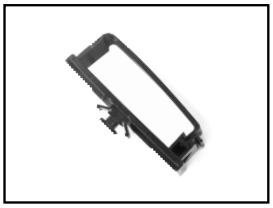

Cable wire

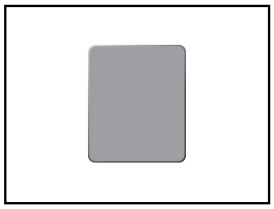

Fiber
(Option:High-Glossy Model Only)

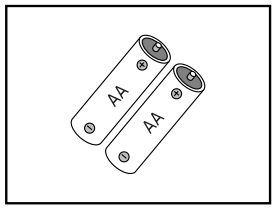

Batteries

The method of wire arrangement

1. Assemble the cable holder enclosed on the back of TV. (PICTURE 1)
   (ASSEMBLY METHOD: After you push the "A"(prominence part of cable holder) in the hole, rotate the cable holder clockwise as an angle of 90°. You can separate in reverse order of assembly.)
2. Open the cable holder. (PICTURE 2)
   (you can open the cable holder that press and push "B" part.)
3. After arrange lines with the cable holder, lock the "B" again. (PICTURE 3)

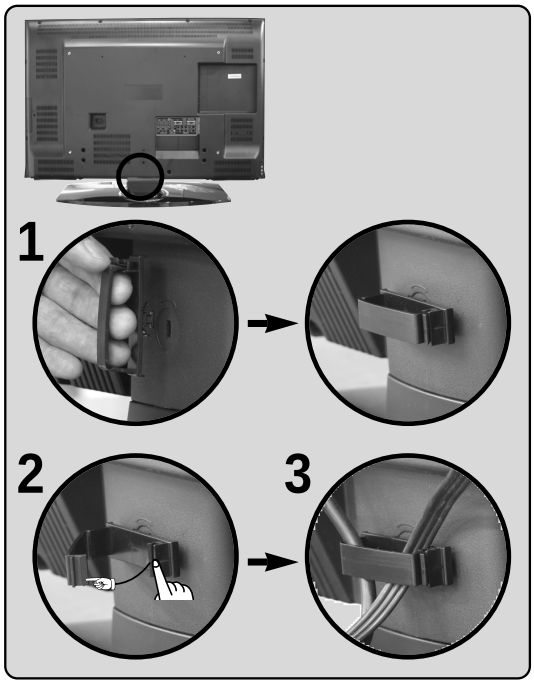

Antenna Connection

Indoor Antenna Connection

1. Connect the feeder cable of the antenna to the combining adapter.

   WHEN THE IMAGE IS NOT CLEAR : Unclear screen image and bad reception may be a cause of wrong antenna connection. Be sure to check its direction and place when installing.

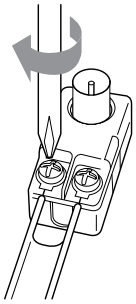

2. Connect the combining adapter to the antenna input at the left side of the TV set.

   WHEN USING THE COMBINING ADAPTER : You may obtain the combining adapter at your closest Service Center.

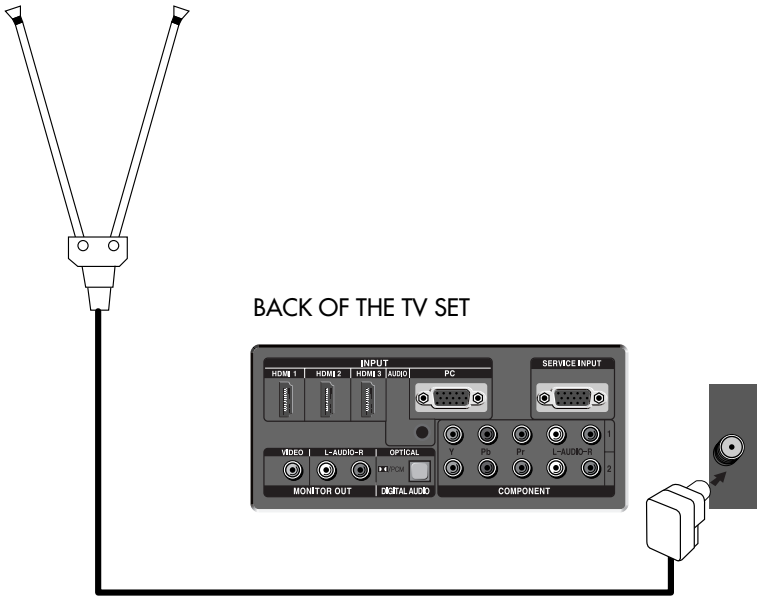

Antenna Connection

CTV Antenna Connection

Such community TV Antenna installation may be found in most co-op apartments.

When a coaxial cable is used

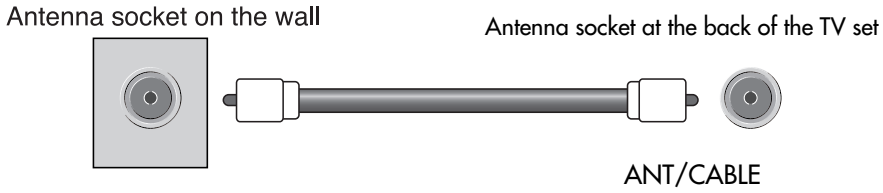

When a feeder cable is used

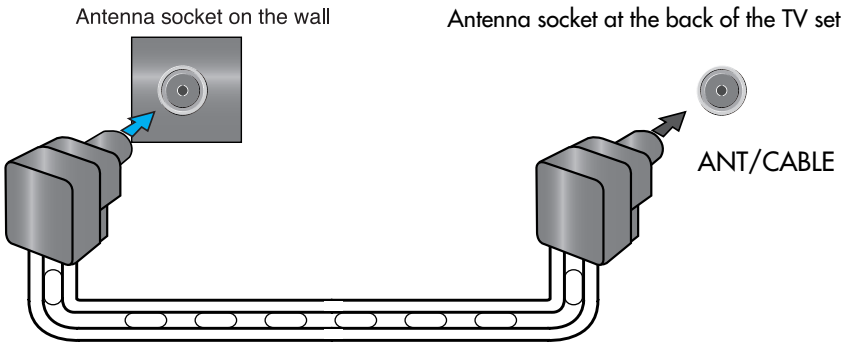

Feeder cable connection with the combining adapter



Antenna Connection

Outdoor Antenna Connection

Outdoor Antenna connection-such as VHF or/and UHF-may be necessary for installation at private houses.

Single Antenna Connection

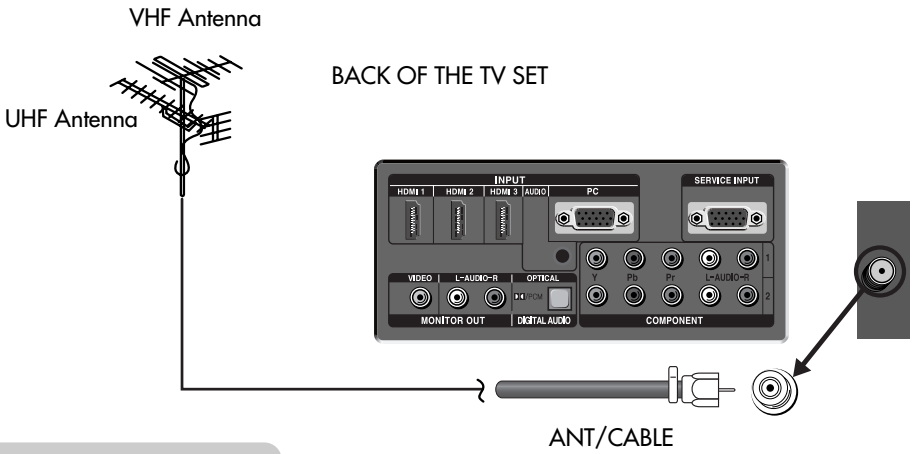

Separate Antenna Connection

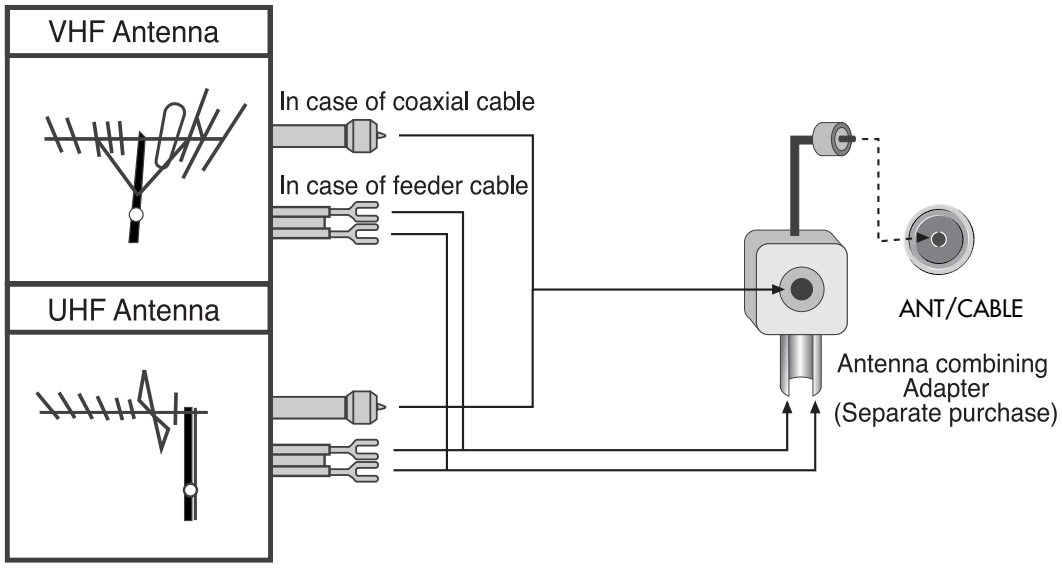

Video Connection

Connecting with an External Source

You may connect an S-Video(Side) input to enjoy clearer and brighter picture images. You can make the connection with the AV inputs.

SIDE OF THE TV SET

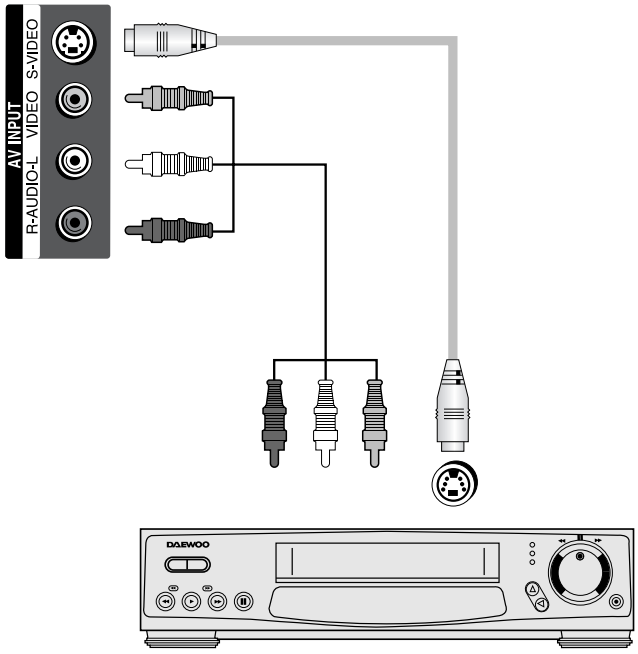

Note : If your AV device has both Video OUT terminal and S-Video OUT terminal, the S-Video connection is recommended for better picture quality.

Camcorder & Video Game Connection

Watching the Camcorder Recording or Video Game on TV

1. Prepare the S-Video and RCA connector.
2. These connectors connect to AV INPUT like below the picture.
3. Turn on the TV set and camcorder/video game.
4. Select Video(S-Video) using the "AV/COMP/MMP" button of the Remote controller or "□/⊡" button of the TV set.

SIDE OF THE TV SET

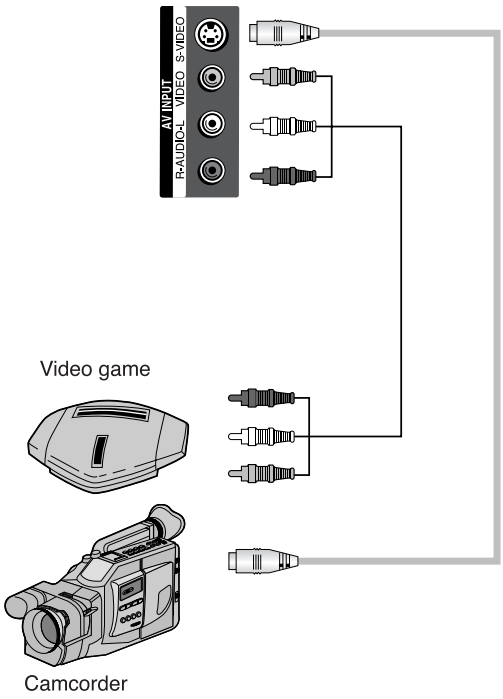

Note : If your AV device has both Video OUT terminal and S-Video OUT terminal, S-Video connection is recommended for better picture quality.

DVD Player Connection

When connecting with a component cable

BACK OF THE TV SET

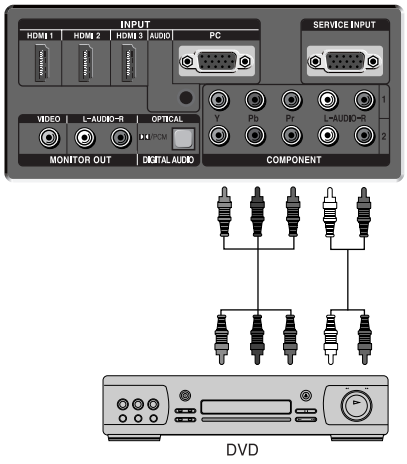

Note : When you connect with the component video, please check the colour of the cable between the DVD and TV set.

When connecting with a S-VHS cable and RCA cable

SIDE OF THE TV SET

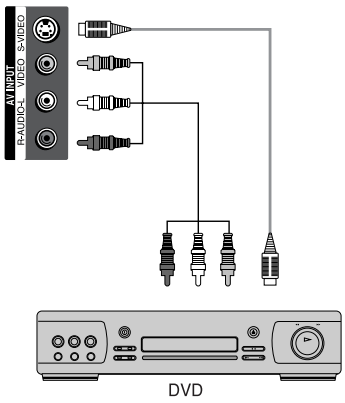

Note : If your AV device has both Video OUT terminal and S-Video OUT terminal, S-Video connection is recommended for better picture quality.

STB(Set Top Box) Connection

When connecting with a HDMI cable

BACK OF THE TV SET

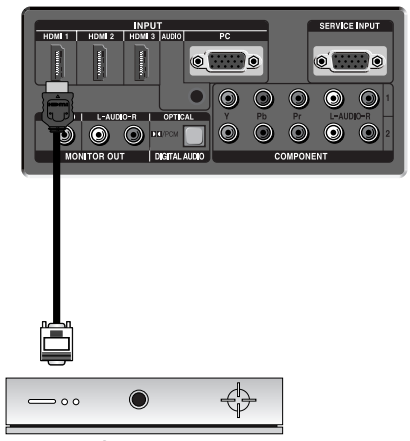

Note : When the Set Top Box output is DVI signal, then the Audio cable should be connected.

When connecting with a component cable

BACK OF THE TV SET

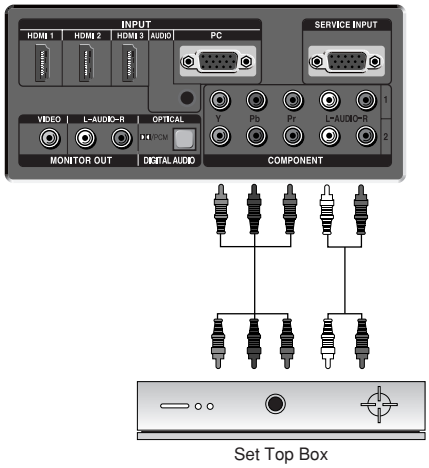

PC Connection

When connecting with PC(D-Sub) cable.

1. Adjust PC resolution to available resolution in LCD TV.
2. Connect between PC and TV set using the D-Sub and Audio cable like below the picture.
3. Turn on the PC and TV set.
4. Select PC mode by pressing "HDMI/PC" button on the remote control or "□/⊡" button of the TV set.

BACK OF THE TV SET

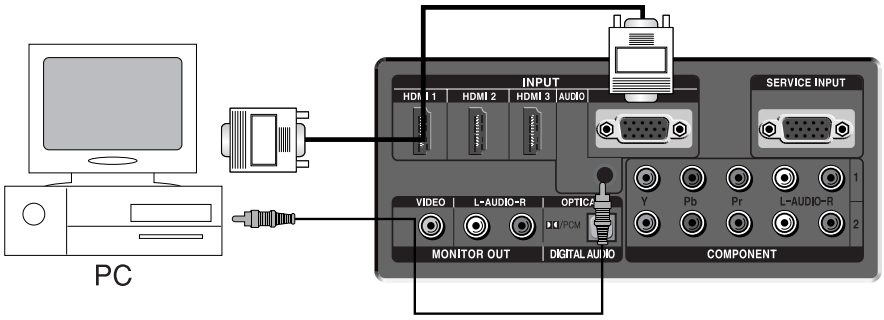

When connecting with a HDMI cable.

1. Adjust PC resolution to available resolution in LCD TV.
2. Connect between PC and TV set using the HDMI and Audio cable like below the picture.
3. Turn on the PC and TV set.
4. Select HDMI mode by pressing "HDMI/PC" button on the remote control or "□/⊡" button of the TV set.

BACK OF THE TV SET

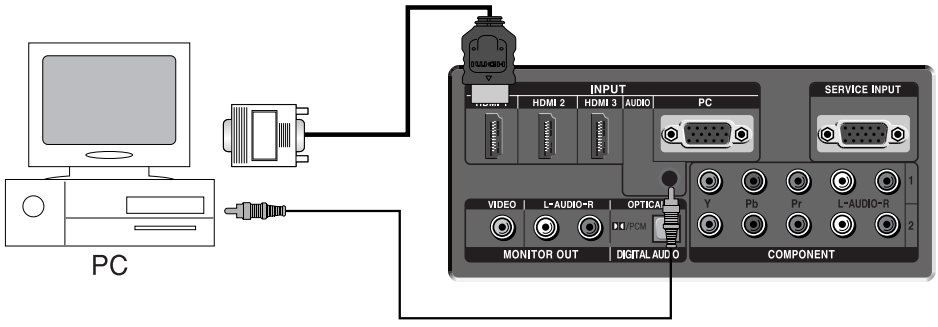

Note : If the graphic card of the PC only supports a DVI signal, you must connect the Audio cable like above the picture.

PC Connection

PC CONNECTION NOTES:

1) In case of PC connection, 1920 X 1080 is the best resolution.
2) In order to display 1920 X 1080 resolution, install the lastest version of graphic card driver in your PC.
3) If there is a [Vertical Frequency] setting menu in the [Screen] Menu of the PC, adjust the frequency to 60Hz.
4) If the PC resolution is too high, it may be hard to read letters. Select a suitable resolution.
5) HDMI input port receives only digital Signal.
6) Depending on the graphic card when plug & unplug the HDMI connection, the screen may not display correctly. Restart the computer if this happens.

Multi input resolution available in LCD TV.

Resolution	V-freq	HDMI	PC(D-Sub)	Component	Standard
640 X 480	60Hz	O	O	X	VESA Standard
	72Hz	O	O	X	VESA Standard
	75Hz	O	O	X	VESA Standard
800 X 600	60Hz	O	O	X	VESA Standard
	72Hz	O	O	X	VESA Standard
	75Hz	O	O	X	VESA Standard
1024 X 768	60Hz	O	O	X	VESA Standard
	70Hz	O	O	X	VESA Standard
	75Hz	O	O	X	VESA Standard
1280 X 1024	60Hz	O	O	X	VESA Standard
1360 X 768	60Hz	O	O	X	VESA Standard
1600 X 1200	60Hz	O	O	X	VESA Standard
1920 X 1080	60Hz	O	O	X	VESA Standard
720 X 480i	60Hz	X	X	O	
720 X 480P	60Hz	O	X	O	
720 X 576i	50Hz	X	X	O	
720 X 576P	50Hz	O	X	O	
1280 X 720P	50Hz	O	X	O	
1280 X 720P	60Hz	O	X	O	
1920 X 1080i	50Hz	O	X	O	
1920 X 1080i	60Hz	O	X	O	
1920 X 1080P	50Hz	O	X	O	
1920 X 1080P	60Hz	O	X	O	

Note : • When you connect with component, PC(D-Sub), and HDMI, you must check the input resolution of external devices.

Flash Memory Card Connection

When connecting with a Flash Memory Card or USB

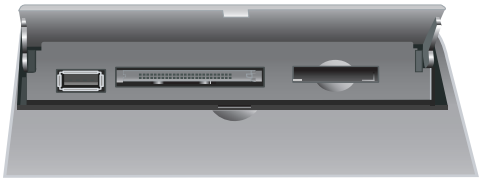

SIDE OF THE TV SET

1. Flash Memory Card or USB connects to USB/Memory Card Slot like upper the picture.
2. Turn on the TV set and Select MMP mode using the "AV/COMP/MMP" button of Remote Controller or "□/⊟" button of the TV set.

Note :

1. Each flashmemory card is supposed to be inserted into the corresponding port as shown in the picture.
- USB Connector for USB 3.5" HDD, USB 2.5" HDD USB flash memory bar, USB Card Reader, MP3 Player.
- CF Connector for CF, Microdrive, ST1 Drive
- Multi Connector for SD, MMC, MS, MS Pro, xD- Picture

2. RSMMC, miniSD, T-Flash, MS Duo and MS Pro Duo, are supposed to be plugged in with adapters combined.
3. Do not remove the source media under processing, or you may lose all the data inside.
4. Supportable Flash Memory Card Type

Supported Flash Memory Cards	CompactFlash	8MB ~ 8GB
	Microdrive / ST1 Drive	1GB, 2GB, 4GB / 2.5GB, 5GB, 6GB, 8GB
	xD-Picture	16MB ~ 2GB : M-CARD, H-CARD
	MultimediaCard	8MB ~ 4GB, MMCPlus, MMCmobile, MMCmicro
	Secure Digital	8MB ~ 2GB, miniSD, microSD (SDHC.2GB~)
	Memory Stick / Duo	4MB ~ 128MB
	Memory Stick Pro / Duo	256MB, 512MB, 1GB, 2GB

5. Supportable Multimedia Format

Supported Data Type	Movie	DivX3, DivX4, DivX5 (.avi)/ XviD (.avi) / MPEG-1 (.mpeg/.mpg) / MPEG-2(.mpeg/.mpg) / MPEG-4 (.mpeg/.mpg V3 avi) / A license for DviX / MPEG-4 decode is required / Up to 800 x 450 (under 4Mbps)
	Music	MPEG-2, MPEG-1 layer 2, MP3, WMA, low complexity ACC, OGG(optional) 32kHz, 44.1kHz, 48kHz, 88.2kHz, 96kHz
	Photo	JPEG : JIFF, EXIF (.jpg) -Baseline JPEG : below 5120 x 3840
	Subtitle	SMI, SRT, PSB

Cable TV Broadcasting Connection

External Input Connection Source

Watching cable television is only possible after you have subscribed to the local broadcasting company and installed a cable receiver. You may make the connection to any of the Component input or Video(S-Viseo).

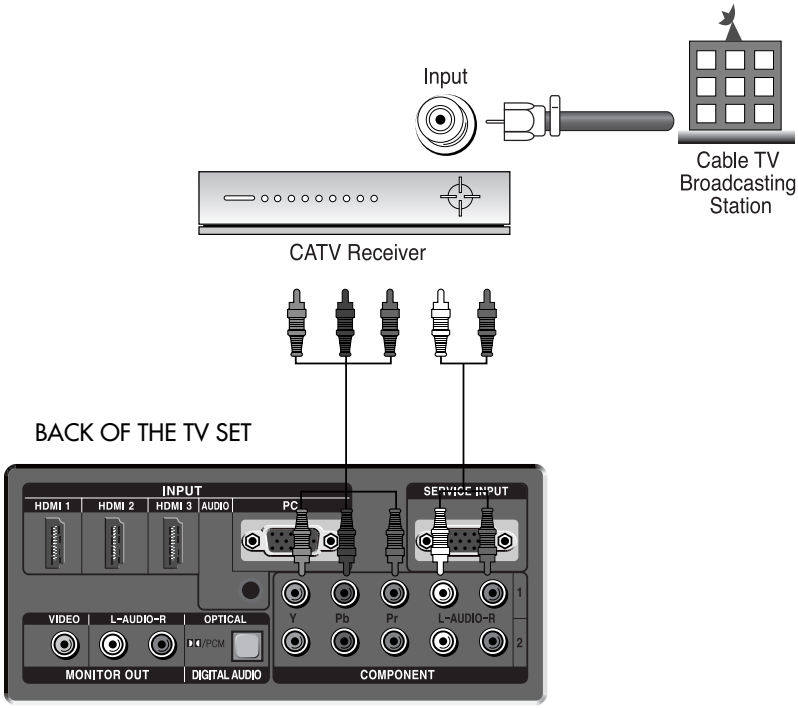

Antenna Input Connection

Watching cable television is only possible after you have subscribed to the local broadcasting company and installed a cable receiver.

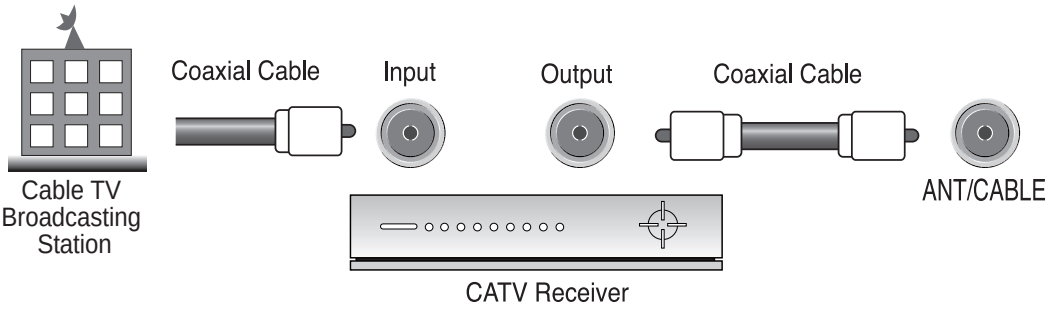

Connect with the Dolby Digital AMP

If you connect the optical output to the Dolby digital AMP, you can listen to cleaner and clearer multi-channel sound.

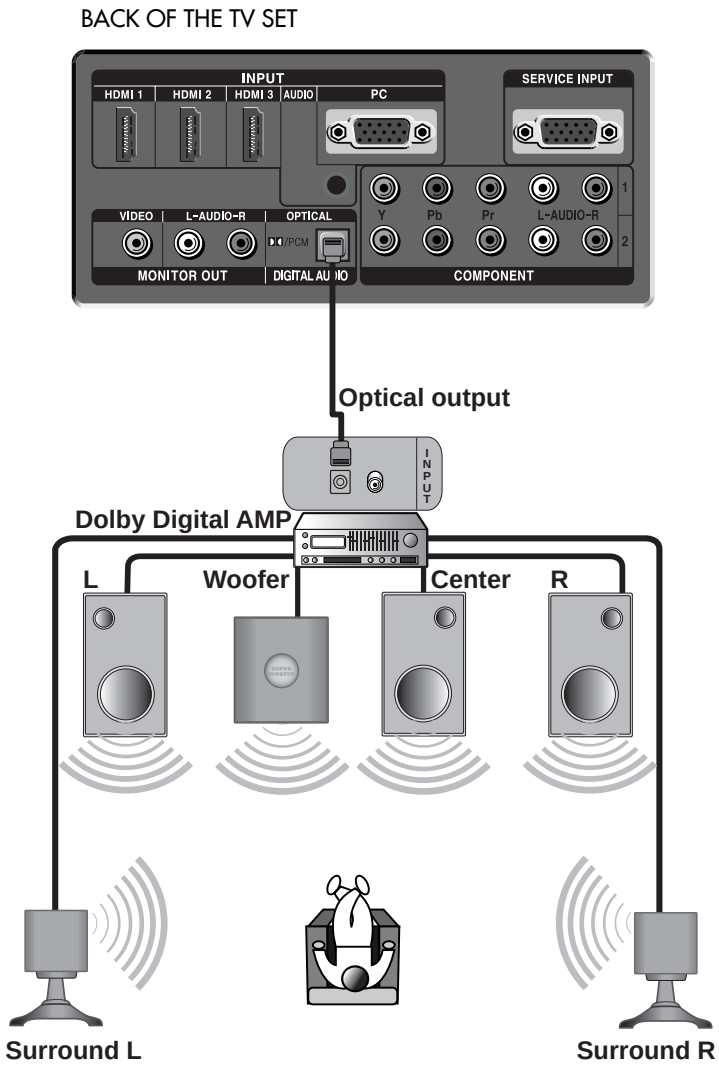

Name of Each Part

Front of TV Set

Buttons on the TV set have the same functions as those of the remote controller.

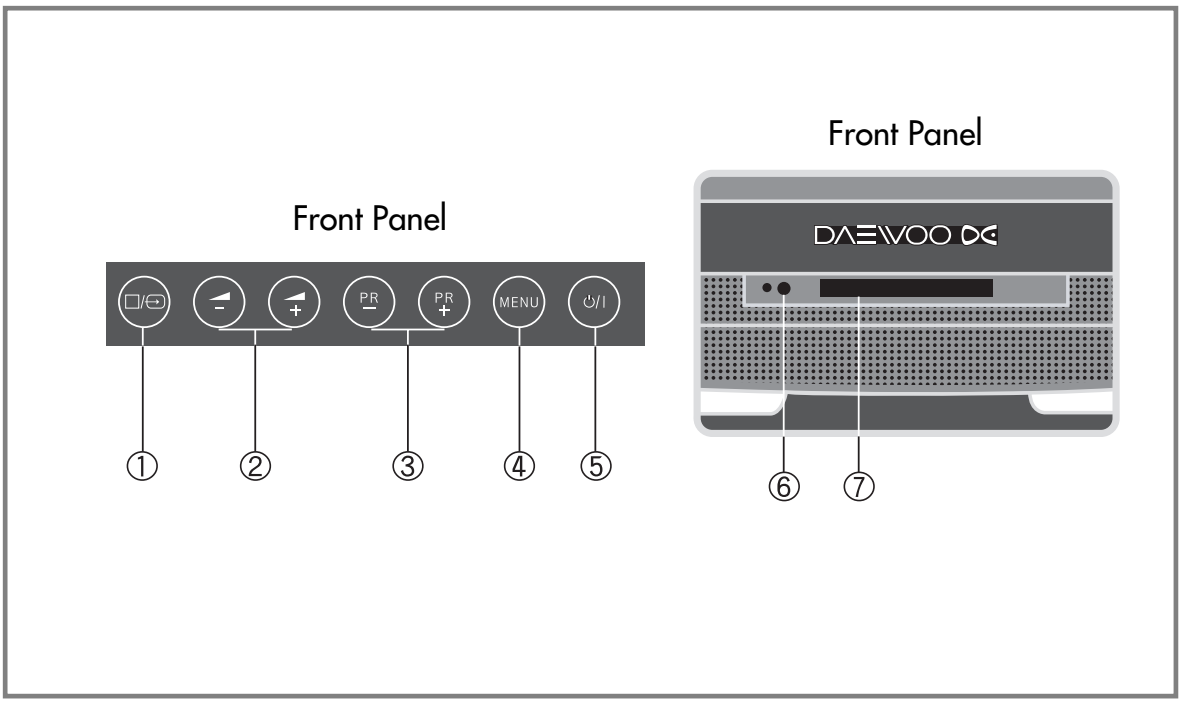

Control Key Buttons.

① □/⇔ **Buttons :** Each time you press this button, the TV will cycle through:
DTV/ATV/Video(S-Video)/Comp.1/Comp.2/MMP/HDMI 1/HDMI 2/HDMI 3/PC/DTV

② **Buttons :** Use these buttons to change your TV's volume or to move the cursor in the menu.

③ **Buttons :** Use these buttons to change channels on your TV or to move the cursor in the menu.

④ **Button :** Use this button to enter and exit the MENU.

⑤ **Button :** Use this button to TV STAND-BY mode/TV ON mode.

⑥ **Remote controller signal receiver**
The screen contains the remote controller signal receiving window; therefore, point the remote controller towards the screen when using it.

⑦ **Smart Window**
The smart Window displays information about the TV set status.
When TV set is turned off, the smart Window displays "Stand By" and when TV set is turned on, it displays current mode.

Name of Each Part

Rear of TV Set

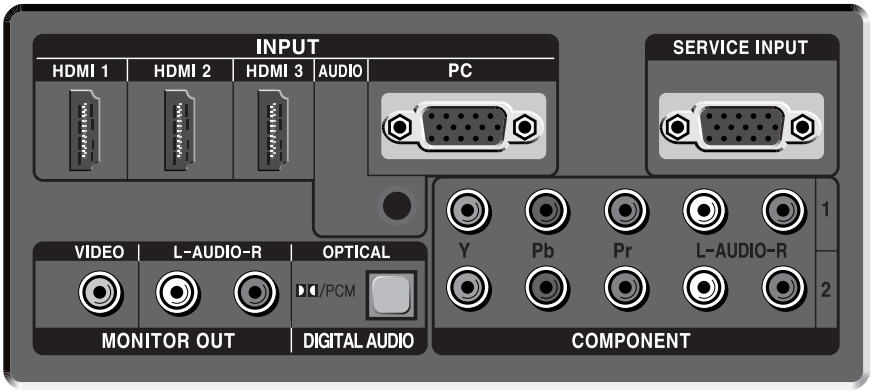

Side of TV Set

Left side of TV Set

Right side of TV Set

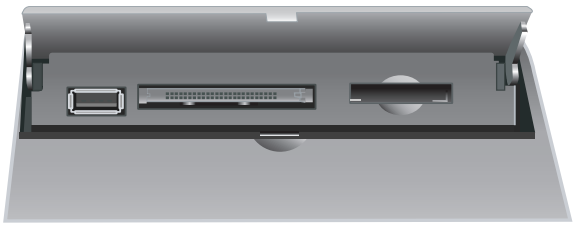

Parts of the Remote Controller

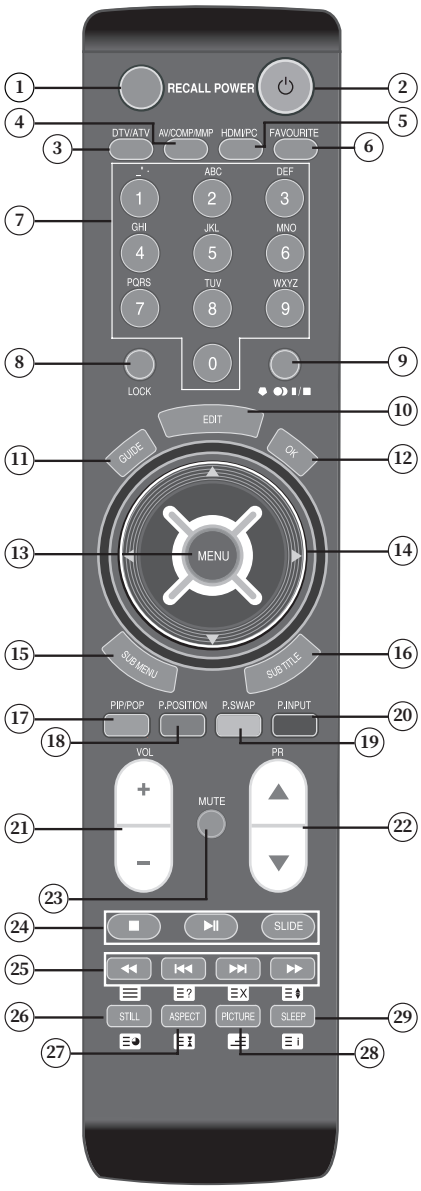

1. RECALL : Display the present modes (ATV/DTV, Video, Comp.1/2, MMP, PC/HDMI 1/2/3) and Signal information for 4 seconds.
   Note. : In Analog TV mode, you can see information about the Programme number, Sound, and Clock. In DTV(DVB-T)mode, you can see information about a channel number, name, broadcasting time and more.
2. ⏻ (POWER) : TV on/off button in Stand-By mode.
3. DTV/ATV : Each time you press this button, the TV will cycle through : ATV => DTV(DVB-T) => ATV
4. AV/COMP/MMP : Each time you press this button, the TV will cycle through :
   Video => Comp.1 => Comp.2 => MMP => Video
5. HDMI/PC : Each time you press this button, the TV will cycle through :
   HDMI1 => HDMI2 => HDMI3 => PC => HDMI1
6. FAVOURITE : Each time you press this button, the programme will change selected(favourite) programmes on TV mode. See page 32.
7. NUMBER : Press the numbers on this board, you can select PR directly in TV mode. (EX. When you want to select PR10, you should press down “1” and “0” within 2second. If you only press down “1”, after 2second, PR1 will be selected.)
   Note. : When the current state is Stand-By mode, you can turn on the TV using the digit key.
8. LOCK : Prevent the use of the TV set without the remote control.
9. ▽/◯/Ⅰ/Ⅱ : You can select sound mode in Mono, Stereo.
10. EDIT : Programme Edit Display Button, See the page 31.
11. GUIDE : Access Electronic Program Guide (EPG).
    It works only in DTV(DVB-T) mode.
12. OK : Confirm to change a part of the menu.
13. MENU : Menu display button.
14. CURSOR : Select on item in the menu left, right, up and down.
15. SUB MENU : MMP Menu display button in MMP mode.
16. SUB TITLE : Select the Subtitle Language.
    It works only in DTV(DVB-T) mode.
17. PIP/POP(Red) : Select either PIP/POP On or Off.

Parts of the remote controller

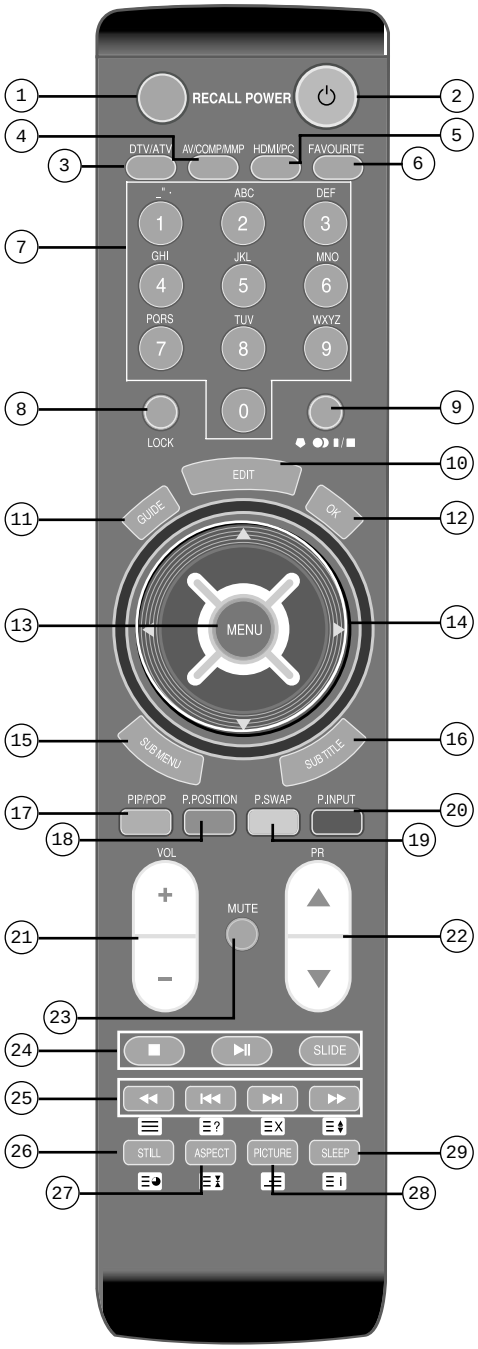

18. P.POSITION(Green) : Move the sub window position in PIP mode. Position :
    left bottom => left top => right top => right bottom
19. P.SWAP(Yellow) : Swap the main screen for sub screen.
20. P.INPUT(Blue) : Sub Screen input mode change as follows PIP table mode or POP table mode.
21. + VOL - : Adjust the volume.
22. ▼ PR ▲ : Change programmes on TV mode.
23. MUTE : Press this button, and the sound goes off. Press again, and the sound returns.
24. Multimedia Player Key : See the page 52.
25. Multimedia Player Key : See the page 52.
26. STILL : Press this button to freeze the picture.
27. ASPECT : Select screen aspect ratio :
    Wide[16:9] => Zoom => Normal[4:3] =>Wide[16:9]
    Note : When current mode is multimedia(PC, HDMI), the aspect only work as the 16:9 mode
28. PICTURE : Picture modes change as follows :
    Normal => Soft => Move => User => Sharp => Normal
29. SLEEP : Sleep Timer setting.
    OFF => 30min => 60min => 90min => 120min => OFF
    Note : If an active signal is not present for about 30 minutes, the set will automatically turn to ST-BY mode.

17~20. Teletext : See the page 59.
25~29. Teletext : See the page 59.

Inserting Batteries into the Remote Control Unit

To load the batteries, turn the remote control handset over and open the battery compartment. Insert the batteries (Two 1.5v, type AA).

Make sure that the polarity matches with the (+) and (-) marks inside of the battery compartment.

Note : To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

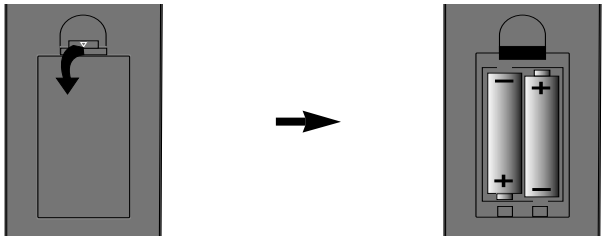

Method To Use Basic Menu

Basic Menu

- The basic menu appears on the screen if you press the “MENU” button of the remote control.
- There are 5 items Picture, Sound, Install, Utilities and Time in the basic menu.
- Each item has sub-items under it. If the desired item is selected, the relevant sub-items are displayed upward.

1. Press the "MENU" button.

• The main menu appears if you press the “MENU” button.

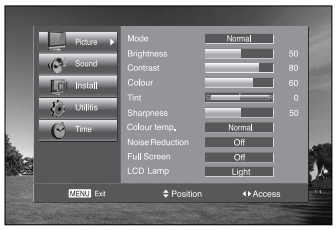

2. Press the "▼PR▲" button.

• You may setup according to the directions on the screen after selecting the desired item by pressing the “▼PR▲” button.

• If the setup is completed, exit from the menu by pressing the “MENU” button.



P i c t u r e : Mode(Normal, Soft, Movie, User, Sharp), Brightness, Contrast, Colour, Tint(NTSC only), Sharpness, Colour temp. Noise Reduction, Full Screen and LCD Lamp.

S o u n d : Balance, AVC, Effect(Off/BBE/M.voice/3D Panorama), Digital Volume and Mode(Normal/User/Concert Hall/Live/Theater/Studio).

I n s t a l l : Set ATS Broadcast, Auto Programme, Manual Programme, Programme Setup, Programme Edit, and Signal Strength.



U t i l i t i e s : Aspect ratio, Subtitle, Lock(Set Password, Block programme, Parental guidance), MGDI plus DEMO and Smart Window.

T i m e : Auto clock, Set current time, On time/setup, Off time/setup, On time PR/Volume, Time zone(NSW/ACT, VIC, QLD, SA, WA, TAS, NT) and Daylight saving.

To Watch TV

On/Off, Number, Mute, Recall, ◄/►, ▼/▲

- Buttons with same name in the main body performs the same function.

Press the "⏻/I" button of the front or right side of the set or the "Power" button of Remote controller .

- You can also turn on the TV using "▼PR▲" or digit key in the ST-BY mode.

Note. :
- The buttons of the remote control and the set operate only when AC power turn on.
- You must pull out the plug of TV set to shut off the AC Power

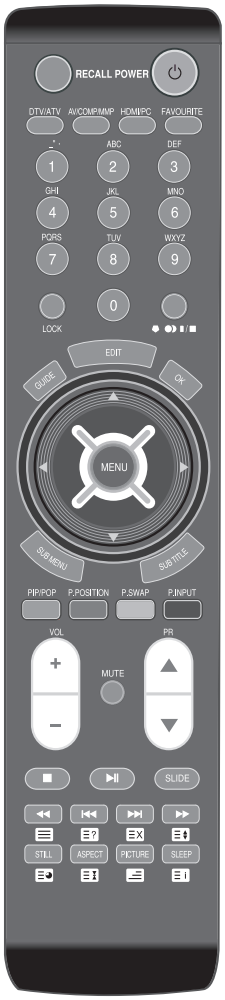

When pressing the Program button

- Select two digits if using the number button for channel selection.
  For example, to watch the No.9 channel,
  Press the number button "0" and "9".
  If pressing only number "9" button, it takes longer time to select the channel.

To suddenly turn sound off

- Press the "MUTE" button.
- No sound is heard if "MUTE(🔇)" is displayed on the screen.
- Sound is heard again if you press the "MUTE" button once again.
  For example, please use this button when telephone rings or when guest comes while watching TV.

Check of TV operation status

- If pressing the "RECALL" button, status of channel or clock broadcasting being currently watched or entry status of video component is displayed on the screen.

To Watch TV

1. Press the "⏻/I(POWER)" button of the front or right side of the set or the "POWER" button of Remote controller.

• Press "▼PR▲" buttons of the main body or "POWER" button of the remote control.

2. Press the "▼PR▲" button.

• Select the desired program by pressing the "▼PR▲" button or the number button.

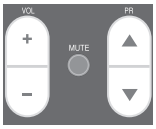

3. Adjust volume.

• Sound reduces by pressing the "VOL -" button.

• Sound increases by pressing the "VOL +" button.

Note : Sound mutes by pressing the "MUTE" button.

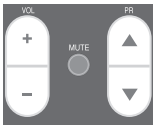

4. Press the "⏻/I(POWER)" button of the front or right side of the set or the "POWER" button of Remote controller for turning the TV off.

Channel programming

Auto Programme for Analog+Digital Channel

- All channels that can be received are stored by this method. It is recommended that you use Auto Programme during installation of this set.

1. Press the "MENU" button to select the Install menu.

• Move the selection bar to the Install menu with "UP/DOWN" buttons.

2. Select the "Set ATS Broadcast".

• Place the selection bar on **Set ATS Broadcast** and select **Analog+Digital** with "LEFT/RIGHT" buttons.

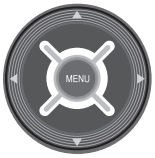

3. Select the "Auto Programme".

• Place the selection bar on Auto Programme and press the "LEFT/RIGHT" buttons.

4. Please wait until the Programme Edit menu appears.

• If you don't want to edit the programs now, escape from menu with the "MENU" button.

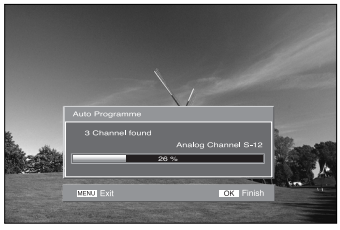

• **Warning**

This television has been factory pretuned to channels 2, 7, 9, 10 and 28. If the auto search function is activated, these preset channels will be deleted and new channels tuned.

Setting Up TV Stations

Manual Programme

The Manual Programme menu shows you information as follows :
- Band, Channel, Search, Programme number

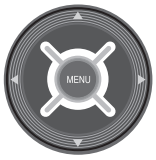

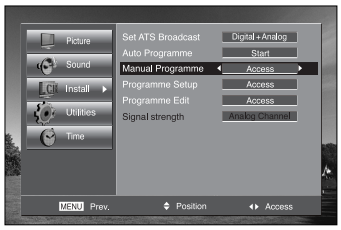

1. Locate the selection bar on the Manual Programme.
- Press the "**MENU**" button to select the **Install** menu.
- Move the selection bar to the **Install** menu with "UP/DOWN" buttons.
- Place the selection bar on Manual Programme and press the "LEFT/RIGHT" buttons.

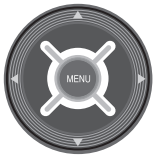

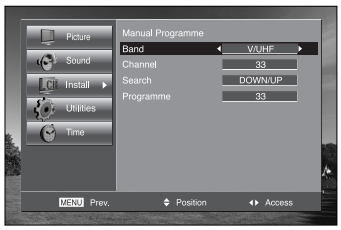

< Analog menu >

2. Searching for channel in the Manual Programme Menu.
- Move the selection bar to the **Band** with "UP/DOWN" buttons.
- Select the desired Band with "LEFT/RIGHT" buttons.
- Move the selection bar to the Channel with "UP/DOWN" buttons.
- Select the desired Channel with "LEFT/RIGHT" buttons.
- Move the selection bar to the Search with "UP/DOWN" buttons.
- Press the "LEFT/RIGHT" buttons to search up or down.
- Searching will be stopped automatically after finding the next channel.

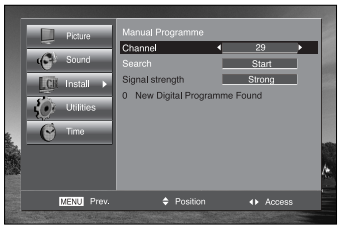

< Digital menu >

Note :
- Band actives in Analog TV mode.
- Signal strength actives in Digital TV mode.
- Programme is fixed (only viewing).

Setting Up TV Stations

Programme Setup (Analog TV mode only)

1. Searching for channel finely

- Move the selection bar to the **Analog Pr**.
- Select a programme number you want to tune finely.
- Move the selection bar to the **Fine**.
- Press the "Cursor" buttons to adjust the fine tuning.

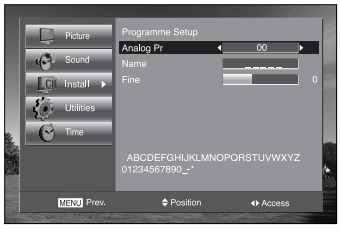

Note :

- If you are unable to get a good picture or Sound because of a poor broadcasting signal, adjustment of Frequency might improve it.

2. Enter a station name

- Move to selection bar to the Name .
- Press the "LEFT/RIGHT" buttons to enter the station name.
- You can enter a station name with "Cursor" buttons.

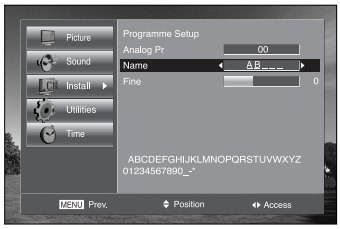

Setting Up TV Stations

Programme Edit

The Programme Edit menu shows you information as follows:
- Broadcast : Analog / Digital
- Program position assignment: Program number, Station name and Skip.

1. Skipping the program positions
- Move to **Programme Edit** in the **Install** menu.
- Move the selection bar to program number to skipping with "Cursor" buttons.
- Press the "**Skip(Red)**" button, then the color of the station name is changed to red.

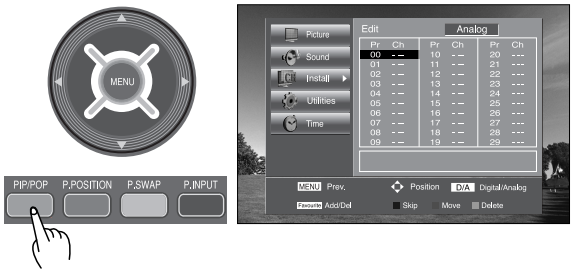

2. Moving the program positions
- Move to **Programme EDIT** in the **Install** menu.
- Move the selection bar to program number to Move with "Cursor" buttons.
- Press the "**Move (Green)**" button.
- Move the selection bar to empty program number.
- Press the "**Move (Green)**" button, then the programs will be moved.

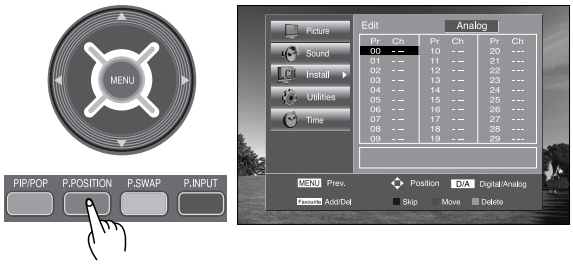

3. Deleting the Programs
- Move to **Programme EDIT** in the **Install** menu.
- Move the selection bar to program number to deleting with "Cursor" buttons.
- Press the **Delete (Yellow)** button.

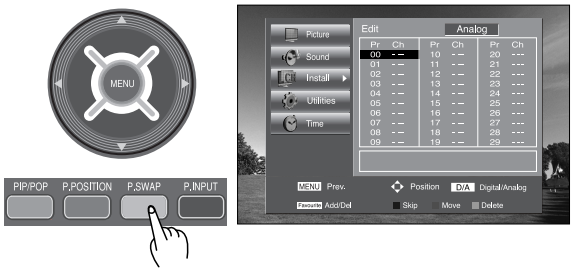

Setting Up TV Stations

Favourite

1. Locate the selection bar on the Favourite.
- Move to **Programme Edit** in the **Install** menu.
- Press the Left/Right buttons.

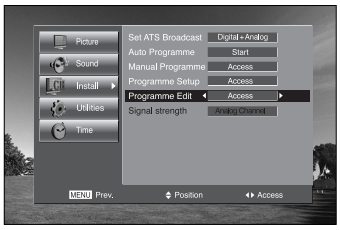

2. Setting up the Favourite
- Move the selection bar to the added/deleted Pr with "Cursor" buttons.
- Add/Delete the Pr with "**Favourite**" buttons.

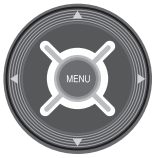

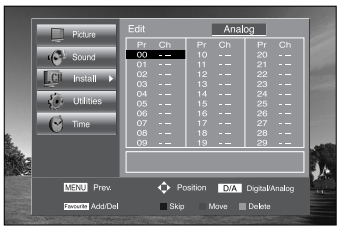

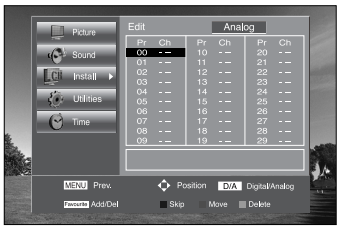

3. Viewing the Favourite Pr
- Whenever pressing "**Favourite**" button, the Pr changes as the selected programme order.

Signal Strength (Digital TV mode only)

- Reveals how strong your DTV signal is and whether you need to adjust your antenna.
- The higher the signal strength, the less likely you are to experience picture degradation.
- Digital TV Signals; May not be available in all areas, nor broadcast all programmes.

1. Locate the selection bar on the Signal strength.
- Move to **Signal strength** in the **Install** menu.
- Display the strength status of digital signal.

2. Press the Recall button in DTV mode, then signal strength is also displayed.

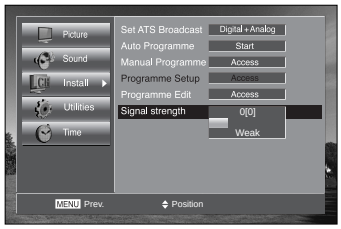

Selection of AV/ COMP/MMP Input Signal

When watching video, Camcorder, DVD, Cable TV with AV

- When pressing " □/⊡ " button on the TV set, screen changes as follows:
  DTV => ATV => Video(or S-Video) => Comp.1 => Comp.2 => MMP => HDMI1 => HDMI2 => HDMI3 => PC => DTV

1. Press the "AV/COMP/MMP" button on the remote controller.

- Screen changes as follows whenever pressing the "AV/COMP/MMP" button.
  Video => Comp.1 => Comp.2 => MMP => Video

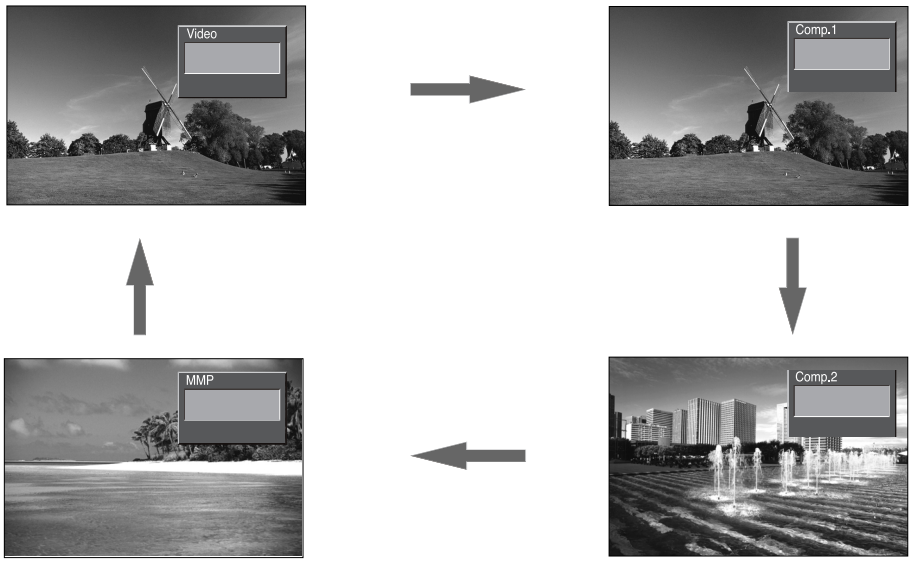

Note :

- If sound signal is mono method, connect it to the L-terminal of the sound input terminal.

Selection of HDMI/PC Input Signal

When connecting PC, STB, DVD with Multimedia

1. Pressing the "HDMI/PC" button on the remote controller.



• Screen changes as follows whenever pressing the "HDMI/PC" button.

HDMI 1=> HDMI 2=> HDMI 3=> PC => HDMI 1

HDMI & PC mode

1. For optimum picture quality, use 1920 x 1080 computer at a 60Hz refresh rate. Using other formats or refresh rates may result in reduced picture quality.
2. If the message 'No signal' appears on the screen, adjust the PC output to a format listed in the Multimedia Input table.

Multimedia Input Format

Resolution	V-freq	HDMI	PC(D-Sub)	Component	Standard
640 X 480	60Hz	O	O	X	VESA Standard
	72Hz	O	O	X	VESA Standard
	75Hz	O	O	X	VESA Standard
800 X 600	60Hz	O	O	X	VESA Standard
	72Hz	O	O	X	VESA Standard
	75Hz	O	O	X	VESA Standard
1024 X 768	60Hz	O	O	X	VESA Standard
	70Hz	O	O	X	VESA Standard
	75Hz	O	O	X	VESA Standard
1280 X 1024	60Hz	O	O	X	VESA Standard
1360 X 768	60Hz	O	O	X	VESA Standard
1600 X 1200	60Hz	O	O	X	VESA Standard
1920 X 1080	60Hz	O	O	X	VESA Standard
720 X 480i	60Hz	X	X	O	
720 X 480P	60Hz	O	X	O	
720 X 576i	50Hz	X	X	O	
720 X 576P	50Hz	O	X	O	
1280 X 720P	50Hz	O	X	O	
1280 X 720P	60Hz	O	X	O	
1920 X 1080i	50Hz	O	X	O	
1920 X 1080i	60Hz	O	X	O	
1920 X 1080P	50Hz	O	X	O	
1920 X 1080P	60Hz	O	X	O	

Selection of HDMI/PC Input Signal

Adjustment of Screen in PC mode

1. Press the "ASPECT" button.

2. Adjustment of the Auto setup

- Press the "ASPECT" button and the **PC Menu** appears.
- Move to **Auto Setup** in the **PC Menu**.
- Press the "LEFT/RIGHT" buttons to detect optimal resolution automatically

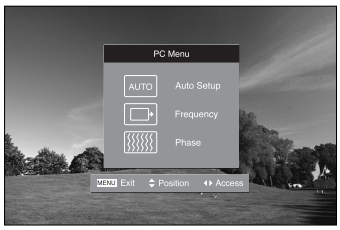

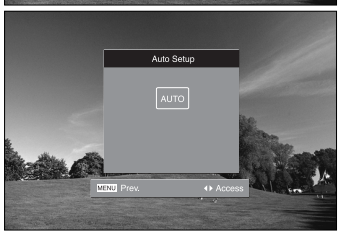

3. Adjustment of the Frequency

- Move to **Frequency** in the **PC Menu**.
- Press the "LEFT/RIGHT" buttons to adjust the frequency of display image.

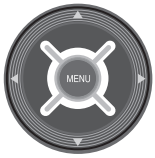

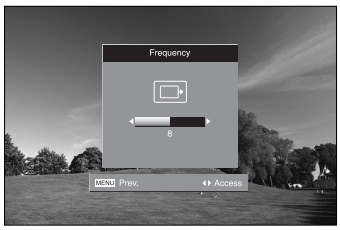

4. Adjustment of the Phase

- Move to **Phase** in the **PC Menu**.
- Press the "LEFT/RIGHT" buttons to adjust the phase to get a clearer picture.

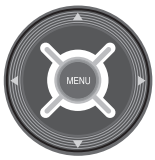

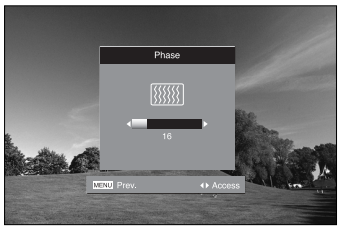

Note :

- During the Auto Adjust, you must not alter a screen on the monitor.
- During the moving picture, Auto Adjust is able to incorrectly work. So you must execute Auto Adjust in still image.
- Auto Adjust incorrectly work at a part graphic card or picture.
- When Auto Adjust is not correctly working, you can adjust with frequency and phase.

Screen Adjustment

When setting up various screen modes

- The user may select various screens designed for a good picture without adjusting the brightness, contrast or colour individually.

1. Pressing the "PICTURE" button.



- Screen changes as follows whenever pressing the "**PICTURE**" button.
  Normal => Soft => Movie => User => Sharp
- The screen adjustment status changes as the following screens are displayed sequentially whenever pressing the "**PICTURE**" button.
- The screen returns to the mode prior to turning power off when then turning power on again.

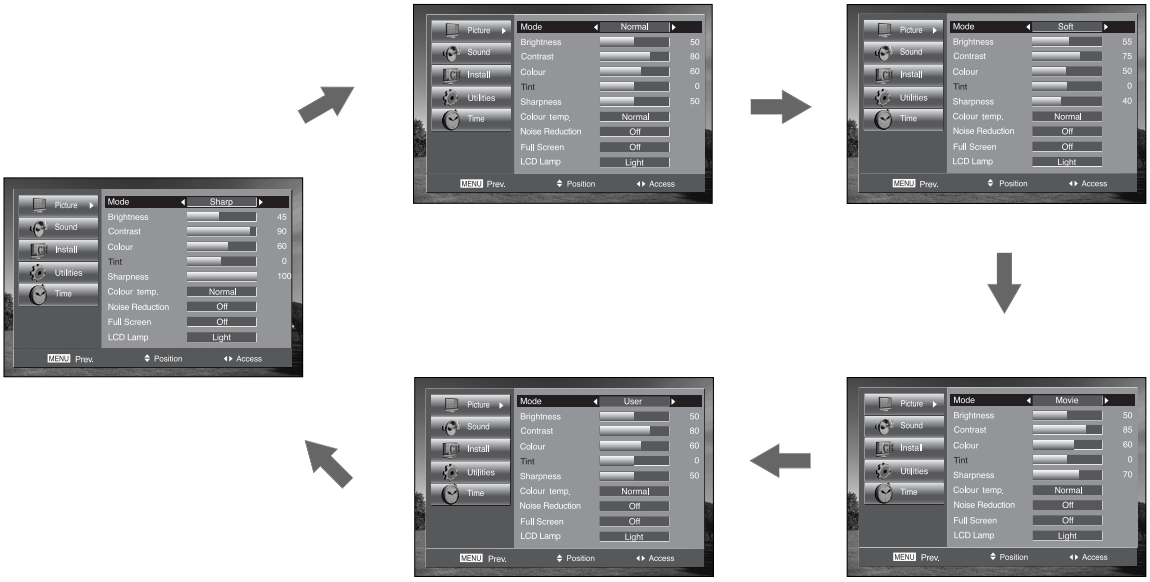

Note :

- **Normal** : For a highly defined image in a normally bright room
- **Soft** : The LCD TV in a dimly lit environment
- **Movie** : Ideal for movies
- **User** : Allows the user to customize settings as desired
- **Sharp** : For a clear-cur image emphasizing high contrast for sports viewing

Screen Adjustment

When adjusting the screen to taste

- You can enjoy various screens by adjusting Brightness, Contrast, Colour, Sharpness, etc to the user's taste.

1. Select "PICTURE" by pressing the "MENU" button.

• The menu screen appears as follows.

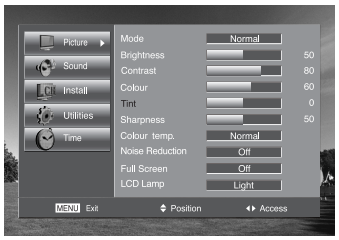

2. Select and adjust each item.

• Move to the PICTURE menu.
• Whenever pressing the "UP/DOWN" button, you can select in order Brightness, Contrast, Colour, Sharpness and N.R.
• You can adjust all items by pressing the "LEFT/RIGHT" buttons

Note. :

• **Brightness** : Adjusts the whole of screen brighter or darker.
• **Contrast** : Adjusts difference between brightness and darkness between objects and background on the screen.
• **Colour** : Adjusts colour thinly or thickly.
• **Tint** : Adjust the natural tint of the image.(NTSC only)
• **Sharpness** : Adjusts outline of the screen smoothly or sharply.
• **N.R.** : Reduce the noise in the picture due to poor reception or poor picture quality (Only in TV, Video, S-Video mode).

Note. :

• The Tint function is not available when receiving PAL(RF, AV), HDMI and PC input.
• The adjusted levels are stored automatically in User mode.

Adjustment of Colour Temperature in TV

- Through colour temperature control, you can change the tone of colour.

1. Move to the Colour Temp menu.

• Using the "LEFT/RIGHT" buttons, select the desired Colour Temperature.

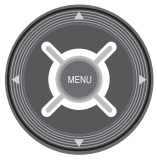

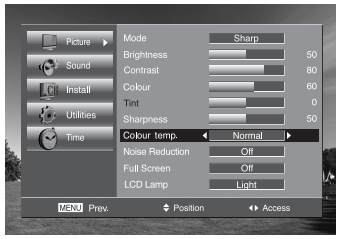

Note. :

• **Normal** : Normal White
• **Warm** : Reddish White
• **Cool** : Bluish White

Screen Adjustment

When adjusting the Full Screen Mode

- You can enjoy various screens by adjusting Brightness, Contrast, Colour, Sharpness, etc to the user's taste.

1. Select "PICTURE" by pressing the "MENU" button.
- Move to **Full Screen** in the **Picture** menu.
- Select either **Full Screen ON** or **OFF** using the "LEFT/RIGHT" buttons.

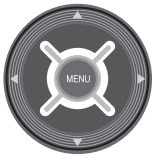

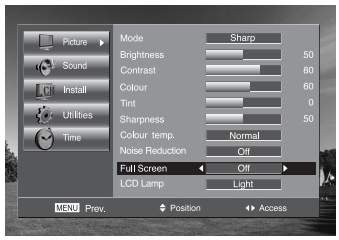

When adjusting the LCD Lamp Mode

- Through LCD (Backlight) Control, You can reduce the power consumption.

1. Move to LCD Lamp in the Picture menu.
- Using the "Cursor" buttons, Select the desired LCD Lamp.

  Light => Dark => Medium => Light

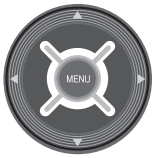

Note. :
- You can choose one from Dark, Medium, Light.
- But the picture is not bright enough when you select Dark or Medium.

Sound Adjustment

When selecting various sound modes

1. Sound mode selects what you want.

- Move to Mode in the Sound menu, then the sound status changes as followed:
  Normal => User =>Concert Hall => Live => Theater => Studio =>Normal
- Mode function is working as follows.

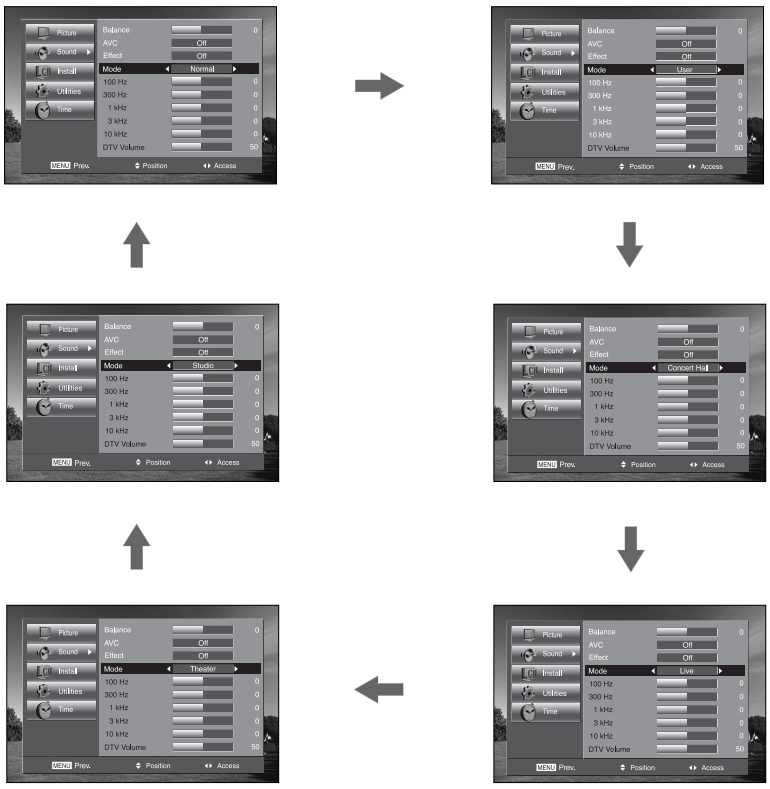

Note. :

- "**Mode**" function is available in Effect Off mode.

Sound Adjustment

When adjusting sound to taste

- The user can enjoy various the sounds by adjusting Balance, AVC, Effect, Equalizer and Digital Volume.

1. Adjust the Balance

- Move to **Balance** in the **Sound** menu.
- Adjust the balance level by using the "LEFT/RIGHT" buttons.

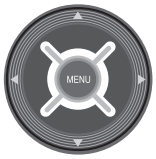

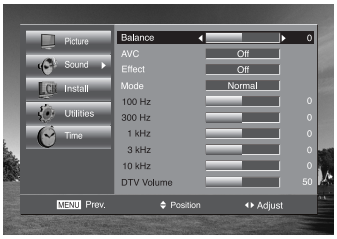

2. Select AVC(Auto Volume Control)

- Move to **AVC** in the **Sound** menu.
- Select either **AVC ON** or **OFF** using the "LEFT/RIGHT" buttons.

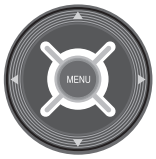

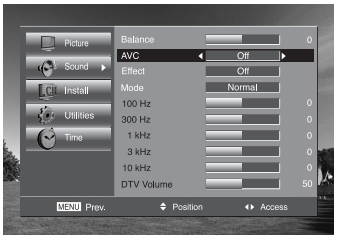

3. Sound mode selects what you want.

- Move to **Effect** in the **Sound** menu.
- Select desirable Effect using the "LEFT/RIGHT" buttons.
  Off => BBE => M.voice => 3D Panorama

Sound Adjustment

4. Adjust the audio Equalizer

- Move to **Mode** in the **Sound** menu.
- Adjust **User** mode using the "LEFT/RIGHT" buttons.
- Select and use the relevant frequency by pressing the "UP/DOWN" buttons.
- You can adjust the degree of the frequency by using the "LEFT/RIGHT" buttons.

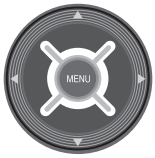

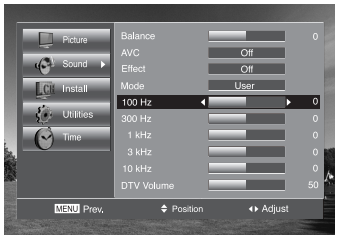

Note. :

- Equalizer adjustment is available in User mode.
- Equalizer : High quality sound range adjustment method used for audio product.
  100 Hz, 300 Hz : Low sound range
  1 kHz, 3 kHz : Middle sound range
  10kHz : High sound range

5. Adjust the Digital volume

- Move to **Digital volume** in the **Sound** menu.
- Adjust the Digital volume level by using the "LEFT/RIGHT" buttons.

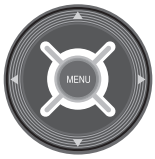

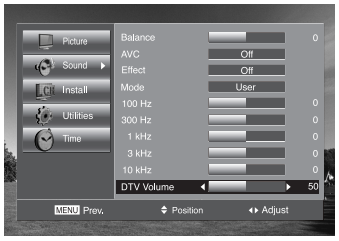

Note. :

- Digital volume is available in DTV(DVB-T) mode.

Sound Adjustment

Stereo and MPEG/Dolby Digital (Digital TV mode only)

1. Mono Sound Selection

- In Stereo reception if the stereo is weak, you can switch to **MONO** by pressing the "▽/◯/I/II" button. Then the OSD character will be change to "F Mono".
  In Mono reception, the depth of sound is improved.
- To switch back to stereo, press the "▽/◯/I/II" button again.

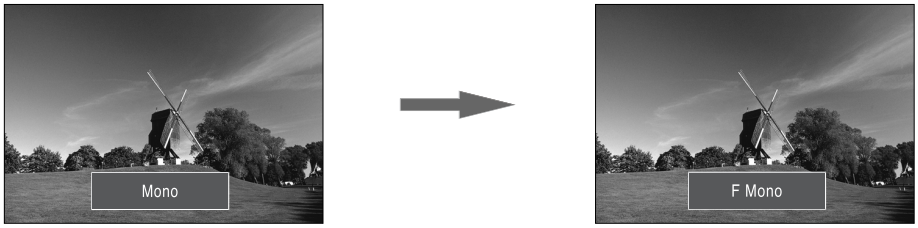

Note.

- "▽/◯/I/II" only works in RF mode.

2. MPEG/Dolby Sound Selection

- In DTV(DVB-T) broadcast reception, you can switch MPEG to Dolby Digital by pressing the "▽/◯/I/II" button repeatedly.

Utilities

Adjustment of Aspect ratio in TV/Video/Component mode

1. Press the "ASPECT" button

• The screen changes as below whenever pressing the "ASPECT" button.
Wide[16:9] => Zoom => Normal[4:3]



2. Adjust the Aspect ratio

• Move to **Aspect Ratio** in the Utilities menu.
• Aspect ratio changes as below.

Note. :

• **Wide[16:9]** : 16:9 will display a true 16:9 (anamorphic) picture with no aspect distortions.
• **Zoom** : Enlarge vertical size of the Wide[16:9] picture.
• **Normal[4:3]** : General TV screen currently broadcasted.
• "Aspect" function is not available in Multimedia (PC and HDMI) mode.

Utilities

Subtitle (Digital TV mode only)

1. Setup of Subtitle

- Move to **Subtitle** in the Utilities menu.
- Select Subtitle to "**On/Off**" using the "LEFT/RIGHT" buttons.

Lock

- Move to **Lock** in the Utilities menu.
- If **Lock** is already set, enter the password as requested.
- Whenever pressing the "UP/DOWN" buttons, you can select in the order of set password, Block programme, and parental guidance.
- You can adjust all items by pressing the "Cursor" button.

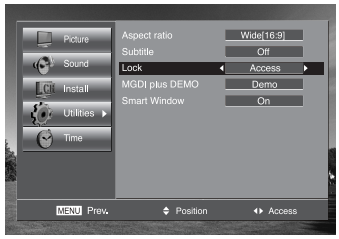

Note. :

- The TV is set up with the initial password '0000'.

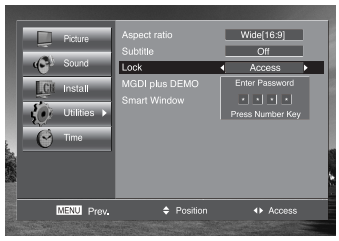

1. Set password

- Move to **Set password** in the Lock menu.
- Press the "LEFT/RIGHT" buttons to access the Set Password.
- Change the password by inputting a new password twice by pressing the "0 ~ 9" Number buttons.

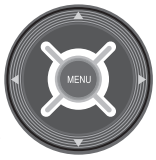

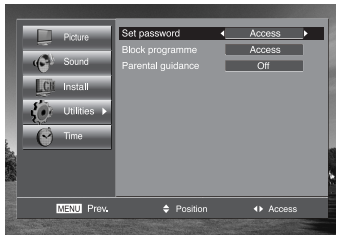

Utilities

Lock

2. Block Programme

- Move to **Block Programme** in the **Lock** menu.
- Press the "LEFT/RIGHT" buttons to access the **Block Programme**.
- Select a channel number that you wish to block by pressing the "**OK**" key.

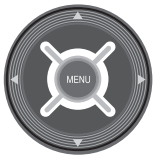

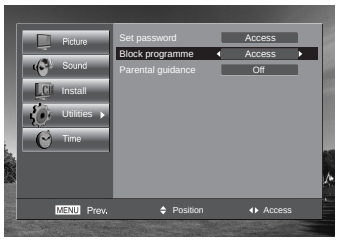

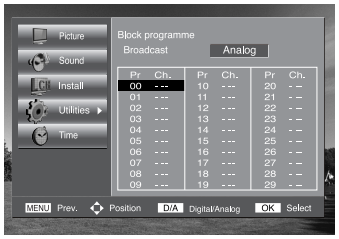

3. Parental guidance

- Move to **Parental guidance** in the **Lock** menu.
- Press the "LEFT/RIGHT" buttons to access the **Parental guidance**.
- Select a grade by pressing the "LEFT/RIGHT" key.

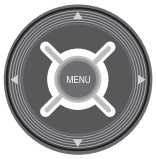

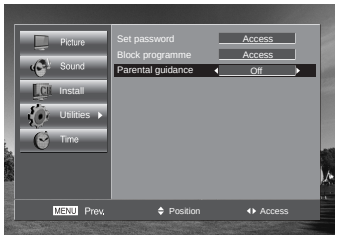

Note. :

- Parental guidance (Digital TV mode only)
  Prevents children from watching certain children's TV programs, according to the ratings limit set.
  Blocking Off : Permits all programs
  R : Restricted
  AV : Adult audiences
  MA : Mature adult audiences
  M : Mature audiences
  PG : Parental guidance suggested
  G : General audience

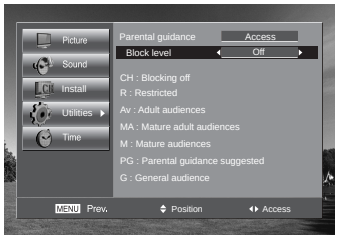

- If you forget your password, you should contact retailer or service agent

Utilities

Child Lock

1. Press the "LOCK" button
• The lock changes either On or Off whenever pressing the "**LOCK**" button.

Note. :
• This prevents the use of the TV set without the remote control.

Hotel Lock

• In the **Hotel Lock** mode, the **Install** menu is not displayed and the **Volume** controls is limited by 60.
• If you want to set up Hotel Lock mode, contact your retailer or service agent.

Smart Window

1.Setup of Smart Window
• Move to **Smart Window** in the **Utility** menu.
• Select **Smart Window** to **"On/Off"**.

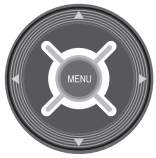

Utilities

Adjustment of Time

1. Setup of Auto Clock

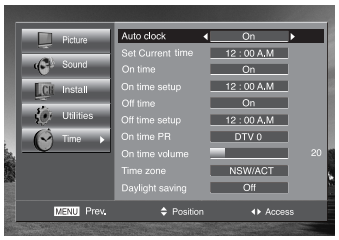

- Move to **Auto clock** in the **Time** menu.
- Select **Auto clock** to "**On/Off**" using the "LEFT/RIGHT" button.

2. Setting the Current Time

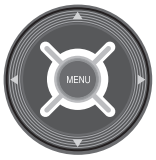

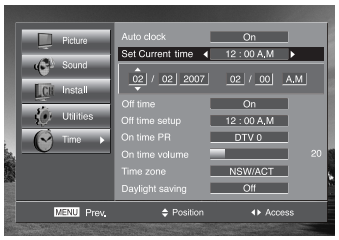

- Move to **Set Current time** in the **Time** menu.
- To go to the **Set Current time**, press the "LEFT/RIGHT" buttons.
- Place the cursor to **Day** with "LEFT/RIGHT" buttons.
- Set the **Day** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **Month** with "LEFT/RIGHT" buttons.
- Set the **Month** with the "UP/DOWN" buttons and then press the Menu button to complete.
- Place the cursor to **Year** with "LEFT/RIGHT" buttons.
- Set the **Year** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **Clock** with "LEFT/RIGHT" buttons.
- Set the **Clock** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **Minute** with "LEFT/RIGHT" buttons.
- Set the **Minute** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **AM/PM** with "LEFT/RIGHT" buttons.
- Set the **AM/PM** with the "UP/DOWN" buttons and then press the **Menu** button to complete.

Utilities

3. Setting the On time / On time Setup / On time PR / On time Volume

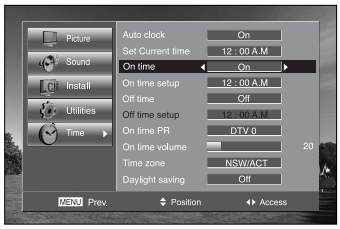

- Move to **On time** in the **Time** menu.
- Select the On time to "on" using the "LEFT/RIGHT" button.

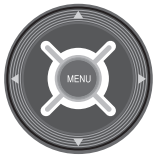

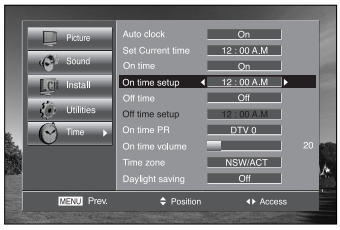

- Move to **On time setup** with the "UP/DOWN" buttons.
- To go to **On time setup**, press the "LEFT/RIGHT" buttons.
- Place the cursor to **Clock** with "LEFT/RIGHT" buttons.
- Set the **Clock** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **Minute** with "LEFT/RIGHT" buttons.
- Set the **Minute** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **AM/PM** with "LEFT/RIGHT" buttons.
- Set the **AM/PM** with the "UP/DOWN" buttons and then press the **Menu** button to complete.

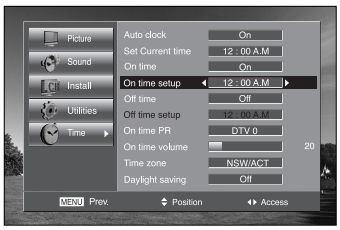

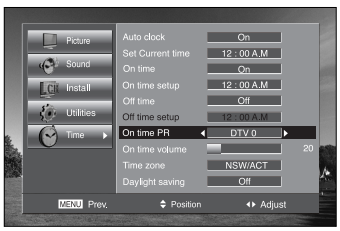

- Move to **On time PR** in the **Time** menu.
- Select the **On time PR** to desirable PR using the "LEFT/RIGHT" button.

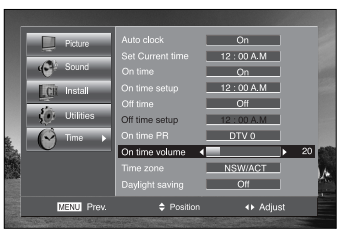

- Move to **On time Volume** in the **Time** menu.
- Select the **On time Volume** to desirable PR using the "LEFT/RIGHT" button.

Note. :

- Confirm the **Current Time** is set. The **On time** is only available when the **Current Time** is set.
- The set will be turned on at selected time.
- If adjusted once, the **On time** continues to operate everyday unless canceling setup or turn the AC power off.
- It is a convenient method to wake you up in the morning.

Utilities

4. Setting the Off time / Off time Setup

- Move to **Off Time** in the **Time** menu
- Select the Off time to "On" using the "LEFT/RIGHT" button.

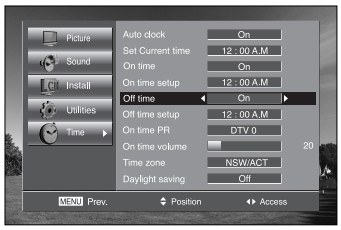

- Move to **Off time setup** with the "UP/DOWN" buttons.
- To go to **Off time setup**, press the "LEFT/RIGHT" buttons.
- Place the cursor to **Clock** with "LEFT/RIGHT"t buttons.
- Set the **Clock** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **Minute** with "LEFT/RIGHT" buttons.
- Set the **Minute** with the "UP/DOWN" buttons and then press the **Menu** button to complete.
- Place the cursor to **AM/PM** with "LEFT/RIGHT" buttons.
- Set the **AM/PM** with the "UP/DOWN" buttons and then press the **Menu** button to complete.

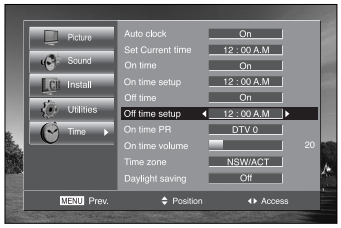

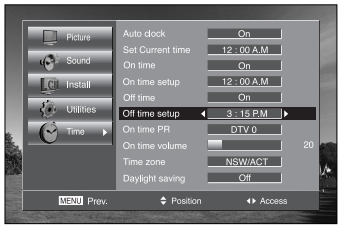

5. Setting the Time zone / Daylignt saving

- Current time depends on the time zone and daylight saving that you belongs to.

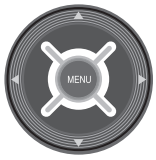

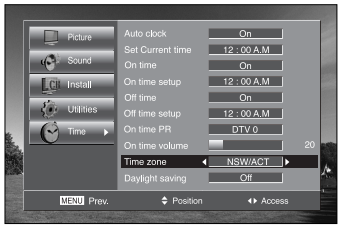

6. Press the "SLEEP" button

- By pressing the "**SLEEP**" button on the remote controller repeatedly, you can select one of the following settings:
  Sleep Timer: Off => 30 => 60 => 90 => 120 => Off
- The set will turn off after the time you select.



Note. :

- Information of Auto clock is required to DTV(DVB-T) signal.
- If an active signal is not present for about 30 minutes, the set will automatically turn to ST-BY mode.

PIP(Picture-In-Picture)/ POP(Picture-Of-Picture)

1. Watching PIP/POP

• By pressing the "PIP/POP" button on the remote controller repeatedly, you can select one of the following settings:



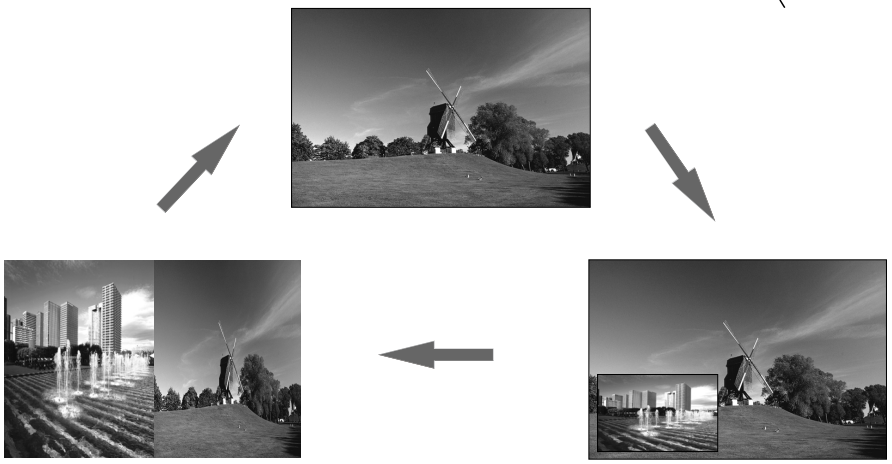

• If you want to change the position of sub picture, press the "P.POSITION" button.



PIP(Picture-In-Picture)/ POP(Picture-Of-Picture)

• If you want to swap main for sub, press the "**P.SWAP**" button.



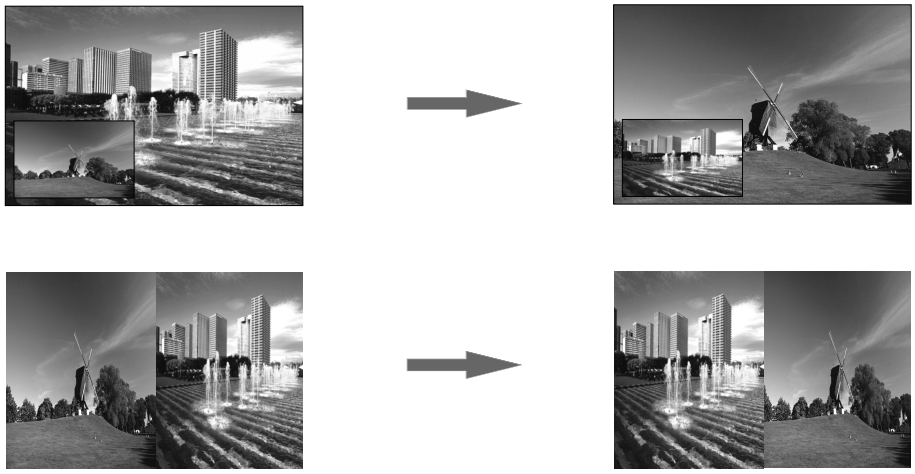

• If you want to change sub screen input, press the "P.INPUT" button.
Sub screen change as followed : PIP/POP table



PIP/POP mode table.

Main \ Sub	ATV	DTV	VIDEO	COMP	COMP(1080P)	HDMI	PC	MMP
ATV	-	X	X	O	O	X	X	O
DTV	X	-	O	O	X	X	X	O
VIDEO	X	O	-	X	X	X	X	X
COMP	O	O	X	-	X	X	X	X
COMP(1080P)	O	X	X	X	-	X	X	X
HDMI	X	X	X	X	X	-	X	X
PC	X	X	X	X	X	X	-	X
MMP	O	O	X	X	X	X	X	-

MMP(Multimedia Player)

When connecting with a Flash Memory Card or USB

1. Pressing the "AV/COMP/MMP" button on the remote controller and select the MMP mode.

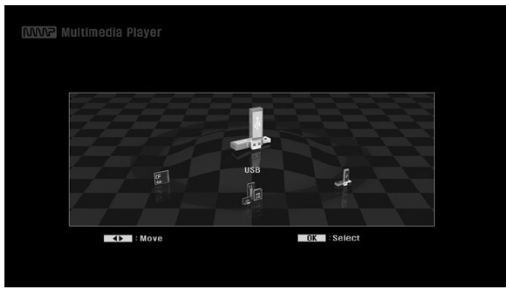

Remote Control

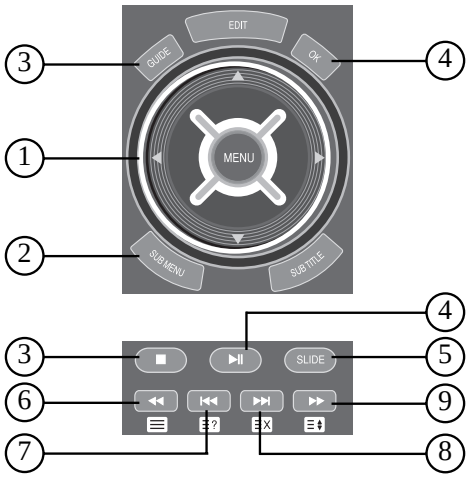

1. Cursor : Select an item in the Menu Up/Down/Left/Right
2. SUB MENU : Display Menu for Multimedia Player
3. STOP, GUIDE : Stop / Go to previous menu
4. Play/Pause, OK: Play / Pause / Select
5. Slide : SLIDE SHOW
6. Fast Backward : Fast Backward (Play → x2→x3 →x4→x5→ Play) in Music and Movie menu
7. Prev : Go to Previous picture, track and page . In the Playback list, go to page list up.
8. Next : Go to next picture, track or page . In the Playback list, go to page list down.
9. Fast Forward : Fast Forward (Play → x2→x3 →x4→x5→ Play) in Music and Movie menu

MMP(Multimedia Player)

Source Selection

1. According to intended type of storages, select one.
- Press "OK" button moving on to function selection menu.

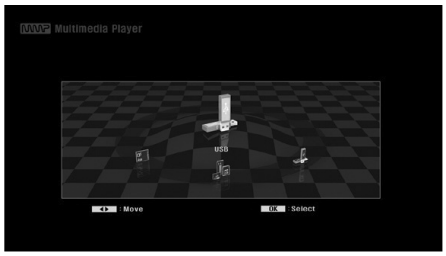

Note. :
- NO DEVICE message appears, if the source selected on the remote is not connected.

Function Selection

1. Select one of the 5 funtions to operate and press "OK" button.

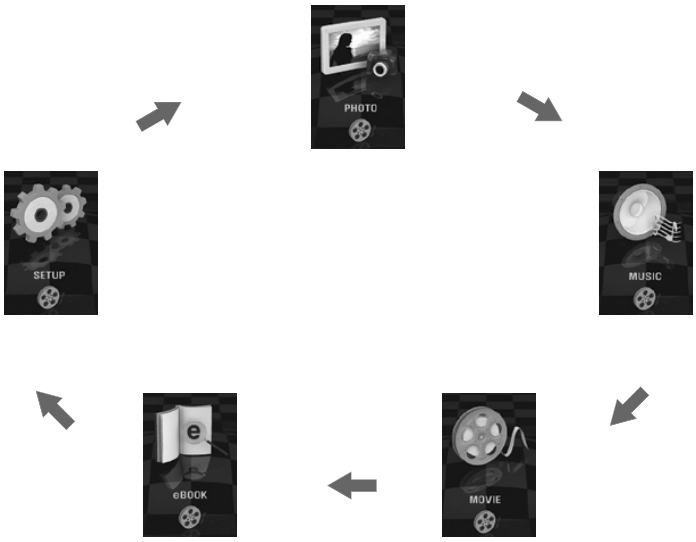

Note. :
- No FILE IN THIS MODE message appears, when available media files are not found in the selected function.

MMP(Multimedia Player)

Photo Function

1. Select Photo to operate Photo preview (Thumbnail) and press "OK" button.

2. Photo Preview

- Thumbnails help know the content of the current folder or the whole source
- Press the "OK" button to start photo playback(full screen).

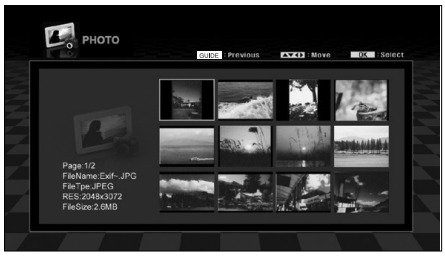

3. Photo Playback

- During playback, Help Menu Bar will appear on the screen right after pressing the "SUB MENU" button.
- You have the capability to special operation such as Rotating, Zooming.

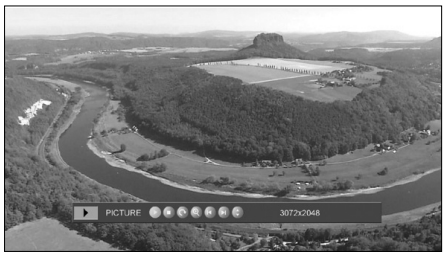

Note. : Photo Help Menu Bar

1. Start / pause playback
2. Stop photo playback and return to photo preview
3. Rotate the picture 90° clockwise
4. Display the picture with different scale
5. Play back previous picture
6. Play back next picture
7. Show details of photo

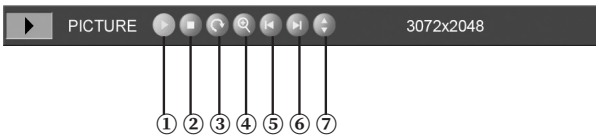

4. Slide Photo Show

- At the state of Slide Show,
  For Music Help Menu Bar, press "SUB MENU".
  For Photo Help Menu Bar, press "SUB MENU" a second time.
  To exit Help Menu Bar, press "SUB MENU" again.

Note. :

- Slide Show only plays when both music and photo files exist in the same folder.

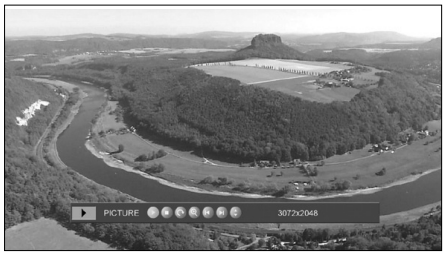

MMP(Multimedia Player)

Music Function

1. After selecting Music Playback function, you will see Music file list on the screen.

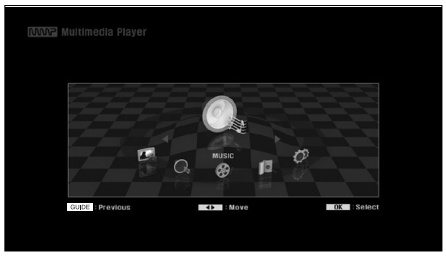

2. Highlight the file to playback and press the "OK" button.

- If you want to change repeat mode, Press the "SUB MENU" button.
- Select a repeat mode that you wish to chang by pressing the "SUB MENU" key.

3. Slide Show Play

- At the state of Slide Show,
  For Music Help Menu Bar, press "SUB MENU".
  For Photo Help Menu Bar, press "SUB MENU" a second time.
  To exit Help Menu Bar, press "SUB MENU" again.

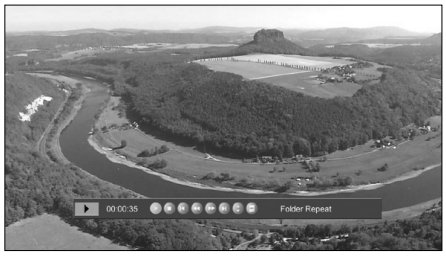

Note. : Music Help Menu Bar (slide show only)

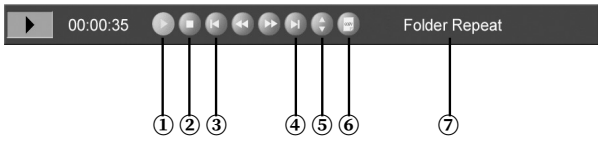

1. Start / pause playback
2. Stop playback and go back to music file list
3. Go to previous track
4. Go to next track
5. Show details of Music file
6. Show ID3 Tag of Music
7. Repeat : Standard paly(play entier folder)/Folder repeat (repeat entire folder)File repeat(repeat designated file)

Note. :

- Slide Show only plays when both music and photo files exist in the same folder.

MMP(Multimedia Player)

Movie Function

1. After selecting Movie Playback function, you will see Movie file list on the screen.

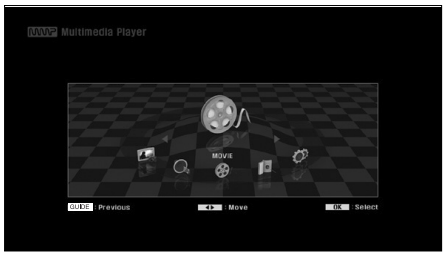

2. Move Preview is enabled, 3 seconds after highlight

- If you want to change repeat mode, Press the "SUB MENU" button.
- Select a repeat mode that you wish to chang by pressing the "SUB MENU" key.

3. Various types of vidoe file and subtitle are supported, due to built-in Codec. (Not applicable to video files beyond HD)

Note. :

- Resolution capacity up to 800 x 450 (under 4Mbps) is pressed.
- Check to see if the subtile file is below 200kb in size, when subtitle doesn't display during movie playback.

4. During Movie Playback, Help Menu Bar shows up on the screen the moment "SUB MENU" button is pressed.

Note. : Movie Help Menu Bar

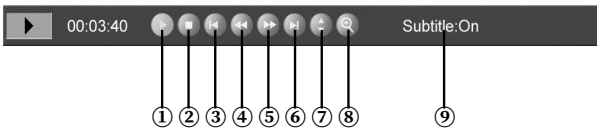

1. Start / pause playback
2. Stop playback and go back to movie file list
3. Go to previous track
4. Fast backward (Play → x2→x3 →x4→x5→ Play)
5. Fast forward (Play → x2→x3 →x4→x5→ Play)
6. Go to next track
7. Show details of Movie file
8. Zoom (x1 → x2 → x3 → x4 → x1)

9-1. Subtitle (On/Off)
9-2. Audio
9-3. Repeat : Standard play (play entier folder) / Folder repeat (repeat entire folder) / File repeat (repeat designated file)

MMP(Multimedia Player)

e-Book Function

1. After selecting e-Book Playback function, you will see e-Book file list on the screen.

2. Highlight the file to playback and press the "OK" button.

- If the "Slide" button is pressed, e-Book plays auto scroll with background music

Note. :

- Auto scroll with music only plays when both music and text files exist in the same folder.

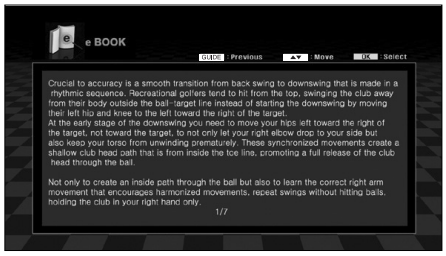
e BOOK
GUIDE Previous
Move
OK Select
Crucial to accuracy is a smooth transition from back swing to downswing that is made in a rhythmic sequence. Recreational golfers tend to hit from the top, swinging the club away from their body outside the ball-target line instead of starting the downswing by moving their left hip and knee to the left toward the right of the target.
At the early stage of the downswing you need to move your hips left toward the right of the target, not toward the target, to not only let your right elbow drop to your side but also keep your torso from unwinding prematurely. These synchronized movements create a shallow club head path that is from inside the toe line, promoting a full release of the club head through the ball.
Not only to create an inside path through the ball but also to learn the correct right arm movement that encourages harmonized movements, repeat swings without hitting balls, holding the club in your right hand only.
1/7

MMP(Multimedia Player)

Setup Function

1. After selecting Setup function, you will see Setup menu on the screen.

2. There are items included in Setup menu as Language, Slideshow Effect, Slideshow Speed, Music Repeat, Video Repeat, Default Setup, Version.

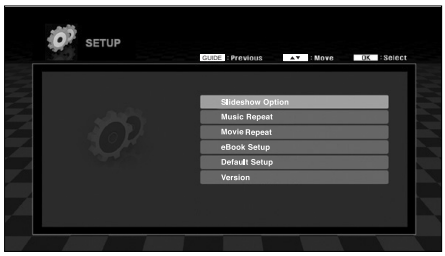

Note. :

- SlideShow option :
  1. SlideShow Speed : Fast, Nornal, Slow
  2. Slideshow Effect : SlideShow type Normal, Random, Bottom_Top, Top_Bottom, L/R, R/L
  3. Background Music : On, Off
  4. SlideShow : On, Off
- Music Repeat : File Repeat, Folder Repeat, Standard Play
- Movie Repeat : File Repeat, Folder Repeat, Standard Play
- eBook Setup :
  1. Auto Scroll : On, Off
  2. Auto Scroll Unit : Line, Page
  3. Auto Scroll Time : 1 ~ 120 seconds
  4. Background Music : On, Off
- Version

Teletext

Teletext

SWITCHING TELETEXT ON/OFF
Press the "TELETEXT" button ( ).
The index page or the page viewed last will appear.
Repeatedly press the "TELETEXT" button the mode in the following order:
TV => TELETEXT => TV
NOTE: Teletext works only in TV/VIDEO mode.

COLOUR BUTTONS IN TOP/FLOF TELETEXT
A red, green, yellow and blue field is shown at the bottom of the screen.
If TOP or FLOF Teletext is transmitted by the station, pressing the corresponding colour button R,G,Y,B on the remote controller, enables you to select the desired page easily.

SELECTING PAGES
The "NUMBER" buttons are used to enter a page number.
The selected page number appears at the top of the screen and the page appears after a short time.
The "PR" buttons increase or decrease the current page number by 1.

INDEX PAGE
You can switch directly to the programme preview(with TOP text) or the overview page of the station you are currently viewing by pressing the "INDEX" button ( ).

PAGE HOLD
Several sub pages can be combined under a page number and are scrolled at an interval determined by the television station. The presence of sub pages is indicated by, for example, 3/6 beneath the time, which means that you are looking at the 3rd page of a total of 6 pages.
If you want to look at a subpage for a longer period of time, press the "HOLD" button ( ).
The HOLD symbol appears and the contents of the subpage shown are kept on the screen and no longer updated or switched to other subpages. Pressing the "HOLD" button again, the current subpage appears.

CALLING UP SUBPAGE DIRECTLY
Pressing the "SUBPAGE" button ( ) , " - - - - " appears.
Enter the subpage number that you want to call up with the "NUMBER" button, for example, the
2nd page, sequence 0002.
The desired subpage will eventually be displayed on the screen and holds it there.
Meanwhile whilst you are waiting, it is possible to go back to the TV picture by pressing the "CANCEL" button( )on the remote and after a while, press the "CANCEL" button again to revert back to the saved Teletext sub page.

WATCHING TV DURING TELETEXT MODE
Some pages are continually updated, for example, stock market reports, sports announcements, and the latest news.
If you want to watch television and stay informed at the same time, press "CANCEL" button ( ).
The regular programme is still visible and the updated Teletext page number appears at the top of the screen.
Pressing the "CANCEL" button again, the Teletext page appears with the updated information.

REVEAL ANSWER
This function can be used on certain pages to reveal the solution of riddles.
Press the "REVEAL" button ( )to reveal a hidden answer and press again to hide it.

DOUBLING CHARACTER SIZE
Repeatedly pressing the "SIZE" button ( )doubles the character size in the following order:
Upper half of the page => Lower half of the page => Normal size => Upper half of the page

MIX
By pressing the "MIX" button ( ), the teletext pages will be separated with the TEXT on the left of the TV picture.
Press the "MIX" button again to return back to teletext pages.

Channel Banner (Digital TV mode only)

Channel Banner

- The channel banner displays information about a channel number, name, broadcasting time, audio service and more. You can see this banner by pressing “RECALL” button at DIGITAL channels.

4. General Information

① Channel number : Displays the current channel number.
② Channel name : Displays the current channel name.
③ Program name : Displays the current Program name.
④ Program time : Displays the current / next program time (start ~ end).
⑤ Parental guidance : Displays the current program rating.
⑥ Current time : Displays the current time.
⑦ Audio status : Displays the current audio status.
⑧ Video Status : Displays the current video resolution.

Electronic Program Guide(EPG)

- The DTV Electronic Program Guide(EPG) displays program information about each channel.
- By pressing the "GUIDE" button to access EPG directly, you can see all channels broadcasting now.

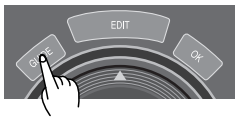

Note. :
• The EPG channel is only available when watching DVB channels.

1. Select a desired channel
• Select a channel with the "▼PR▲" buttons.
• Press the GUIDE button.
• Move a programme with the "▼PR▲" buttons.
• If you need detail information, press the "RECALL" button.

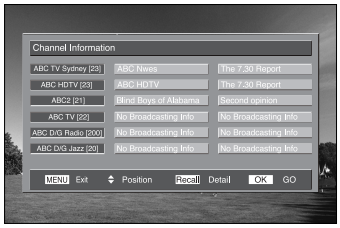

Troubleshooting

Symptoms and Solutions

Please check the following items before asking for repair service.

Symptom	Check items
Neither picture nor sound	- Check the contact of sockets is all right. - Check the TV main power is on.
Picture is OK but no sound	- Check the Volume control is set to minimum or mute.
Sound is OK, but no colour.	- Check the colour control and adjust it properly. - Check the program is in colour and not in black & white.
The picture has image.	- Check the antenna is installed correctly and if not, adjust the overlapped antenna toward the broadcasting station.
Picture has “snow noise”.	- Check the antenna or its connection is correct and if not, correct the antenna fault or connection cable fault. - Check if car traffic or neon sign disturbs the sound effect.
Stripes on picture.	- Check the susceptible interference by other electronic devices such as radio and television and keep magnetic or electronic devices away from the TV.
Bad stereo or Dual sound.	- Long distance from the station or other radio waves can generate bad sound reception. If so, change the mode to Mono.
Remote control does not work. 	- Check if the batteries in the Remote control are dead. - Check if any object between IR sensor of the TV and the Remote control does not obstruct. - Check if the TV is on Teletext mode.

Troubleshooting

In DVB-T mode

Some Problems will only occur when viewing DVB channels.
Due to the different techniques involved in digital reception, DVB signal quality can be poor even if you appear to have a strong signal when viewing analogue porgrammes.
The DVB system requires a good quality signal to provide the best picture. When viewing analogue pictures, interference such as signal reflection from nearby buildings or mountains causes 'ghosting', but still provides a viewable picture. For the DVB system, Interference such as this can disrupt the flow of data causing the picture to be made up of large blocks, or to freeze intermittently. If the picture disappears completely, this could mean that signal quality is very poor. If this happens often, you may need to improve your aerial system to provide a better signal. This TV contains a complex microprocessor which enables you to view enhanced digital services. Occasionally this device may need to be reset. This can be done by pressing the stand-by button on your remote control or the power switch on the front panel.

Symptom	Check
No DVB Channels listed in the TV Guide after Auto Programme	Check that DVB transmissions are available from the transmitter you are currently using. If not, try directing the aerial at another local transmitter. Check analogue transmissions. If picture quality is poor, you will need to improve or change your aerial system to receive DVB channels. Consult a local installer.
Blocky interference. Picture freezes intermittently.	Blocky interference indicates that the signal quality is poor. You should consider improving your aerial system. To check the quality of your signal use the Signal strength (See page 32)

Troubleshooting

In PC mode

Symptom	Check
"Not available signal" appears on the screen	- Check the resolution and frequency of your PC. Then, adjust them to optimum condition for LCD TV. - Refer to the table of PC mode input format. (If registered resolution and frequency on the table no listed then no picture will be displayed.)
"No signal" appears on the screen.	- Ensure that the signal cable is firmly connected to PC and TV.
Image is not clear.	- Adjust the PHASE control.
Image is not centered.	- Ensure that the desktop area has no black area in outer side. - Excute Auto Setup.

Standard of Product

	Features	DLV-42U1GMB	DLV-46U1UMB
LCD Panel	Screen Size	106.68cm(42")	116.84cm(46")
	Aspect Ratio	16:9	16:9
	Resolution	1920 x 1080 (WUXGA)	1920 x 1080 (WUXGA)
	Brightness	500 cd/㎡	500 cd/㎡
	Pixel Pitch	0.4845 x 0.4845	0.1767 x 0.1767
	Contrast Ratio	6000:1(MAX)	6000:1(MAX)
Dimension(W x H x D)	with stand	1044 x 692 x 124.9 mm	1144 x 745.5 x 127.5 mm
	without stand	1044 x 757 x 345 mm	1144 x 810 x 348 mm
Wall Mount	Dimension	698 x 460 x 46.6 mm	698 x 460 x 46.6 mm
	Hall Size	400 x 600 screw Φ 6mm	400 x 600 screw Φ 6mm
TV System	Receiving System	PAL-B/G, B/H, DVB-T, NTSC(AV)	
Power Source	220 -240V~, 50/60Hz		

♥ Owing to our policy of continuous improvement, specifications may change.